 


# TIMEX®

Model T107

## Alarm Clock

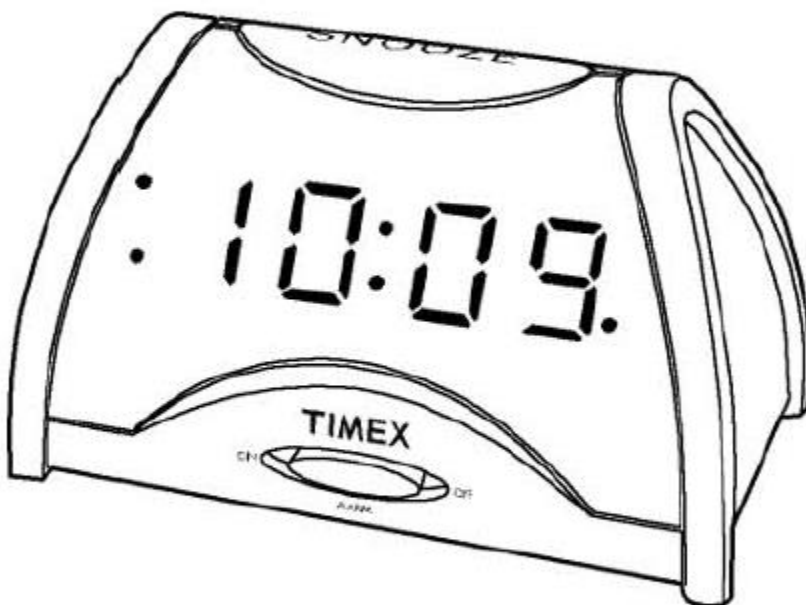

For additional information, online registration,  
and exclusive special offers visit our website:

[www.timexaudio.com](http://www.timexaudio.com)

For questions or comments regarding this or other products,  
please call our toll-free number 1-800-888-4491.  
Para instrucciones en Español, llame al 1-800-888-4491.

## Limited 90-Day Warranty Information

---

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$5.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$10.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$5.00 (\$10.00 after warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

~~Consumer Repair Department  
SDI Technologies Inc.  
Timex Audio Products Division  
1401 Pullman Drive, Suite A  
El Paso, TX 79936-7726~~

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

 
 
This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.**

**TIMEX is a registered trademark of Timex Corporation in the U.S. and other countries.**

## Controls and Indicators

---

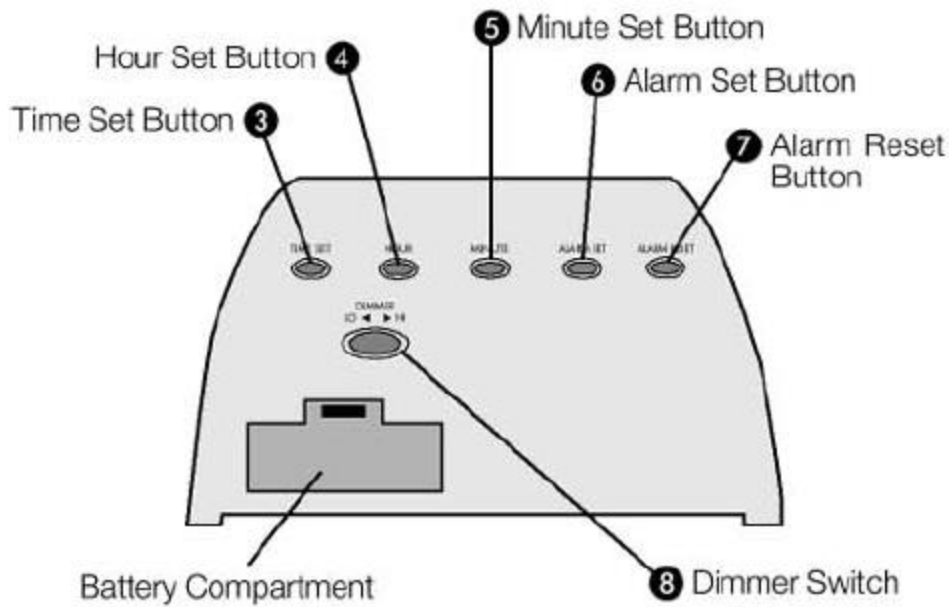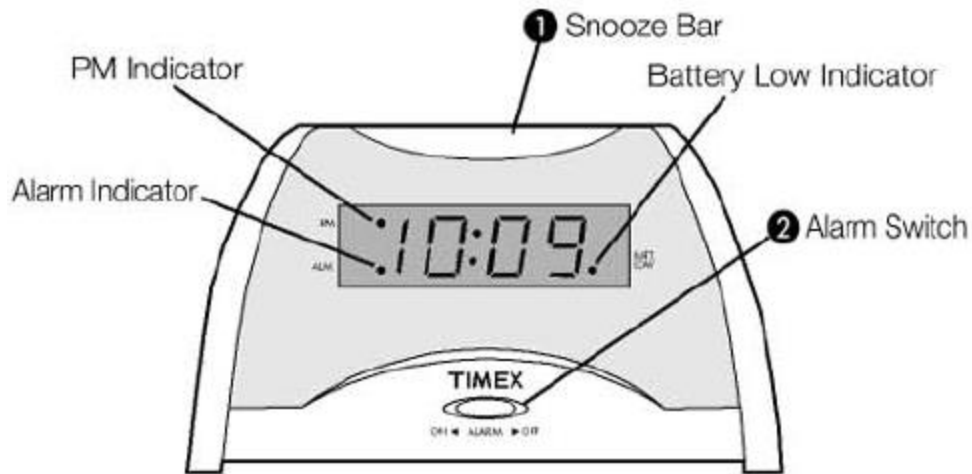

# Installation and Maintenance

---

## Setup and Maintenance

1. Place the clock on a level surface away from direct sunlight or sources of excessive heat.
2. Protect your furniture when placing the clock on natural wood or wood with a coated finish. A cloth or other protective material should be placed between the clock and the furniture.
3. Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents are not recommended, as they may damage the surface of the case.
4. If the clock is not to be used for a prolonged period, such as a month or longer, remove the battery to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the battery.

 
## Battery Backup Installation

It is recommended that a "9-Volt" battery be installed in order to activate the Battery Backup. In the event that the AC power cord is disconnected or a power failure or other interruption occurs, the Battery Backup will maintain clock and alarm settings for the life of the battery, ensuring that the alarm will sound when power is restored. During interruptions the settings will be saved and automatically restored when power is again active.

1. The battery compartment is located on the back of the clock. Unlatch the battery compartment door.
2. Install one "9-Volt" battery (alkaline is recommended for longer life), matching the terminal ends with the same-sized connectors of the terminal harness.
3. Replace the battery compartment door, making sure it clicks shut.
4. The display's **Battery Low Indicator** will light when no battery is installed, or when the battery is weak or installed incorrectly.

## For the Best Battery Performance

- We recommend using alkaline batteries.
- Non-rechargeable batteries are not to be recharged.
- Remove rechargeable batteries (if removable) from the clock before charging.
- Rechargeable batteries are only to be recharged under adult supervision.
- Remove exhausted batteries from the clock.
- Do not short-circuit the supply terminals.

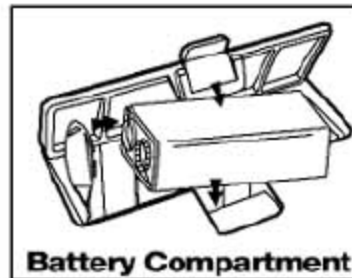

## Setting the Clock

---

1. Press and hold the **3 Time Set Button** while pressing the **4 Hour Set Button** and the **5 Minute Set Button**. Be sure to set the correct AM/PM time, shown by the display's **PM Indicator**.
2. After setting the time, release the **3 Time Set Button**.

## Operating the Alarm

---

### Setting the Alarm

1. To set the wake time, press and hold the **6 Alarm Set Button** while pressing the **4 Hour Set Button** and the **5 Minute Set Button**. Be sure to set the correct AM/PM wake time, shown by the display's **PM Indicator**. Release the **6 Alarm Set Button**.
2. To activate the alarm, slide the **2 Alarm Switch** to the "On" position. The **Alarm Indicator** on the display will light.

### Turning off the Alarm

1. When the alarm sounds, press the **7 Alarm Reset Button** to turn the alarm off and reset it for the same time on the following day. To turn the alarm off completely, slide the **2 Alarm Switch** to the "Off" position, so that the **Alarm Indicator** no longer appears on the display.
2. To activate the snooze feature, press the **1 Snooze Bar**. The alarm will shut off for nine minutes before sounding again. This can be repeated several times during the two-hours snooze cycle.
3. If it is not turned off, the alarm will sound for two hours before stopping. As long as the **Alarm Indicator** appears on the display, the alarm will sound at the set time.

**NOTE:** The buzzer is a "Gentle Wake" alarm, meaning that the volume will rise as time passes.

## Adjusting the Display Brightness

---

- This alarm clock features an adjustable display brightness, with dim and bright settings. To select a setting, slide the **8 Dimmer Switch** to the "Hi" or "Lo" position.