

TIMEX®

Model T158

MP3/CD line-in Alarm Clock



For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.



CAUTION

**RISK OF ELECTRIC SHOCK.
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK OF UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this polarized plug with an extension cord receptacle or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all the safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warning, and always follow the instructions on the unit and in the instruction and service manuals.

- Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance itself.
- Grounding or Polarization** – This product is equipped with a polarized alternating current line plug. (a plug having one blade wider than the other) As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug by forcing the plug into the outlet.
- Power-cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
- Cleaning** – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Non-Use Periods** – The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
- Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into an enclosure through openings.
- Attachments** – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Lightning** – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Damage Require Service** – The unit should be serviced by qualified service personnel when:
 - The power supply cord or plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain.
 - The unit has been dropped or the enclosure damaged.
 - The unit does not appear to operate normally or exhibits a marked change in performance.
- Servicing** – The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
- Safety Check** – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Antenna** – Do not connect to an external antenna.

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

 
 
 
SDI Technologies Inc.
Timex Audio Products Division
1330 Goodyear Dr.
El Paso, TX 79936-6420

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TIMEX is a registered trademark of Timex Corporation the United States and other countries.

Controls and Display

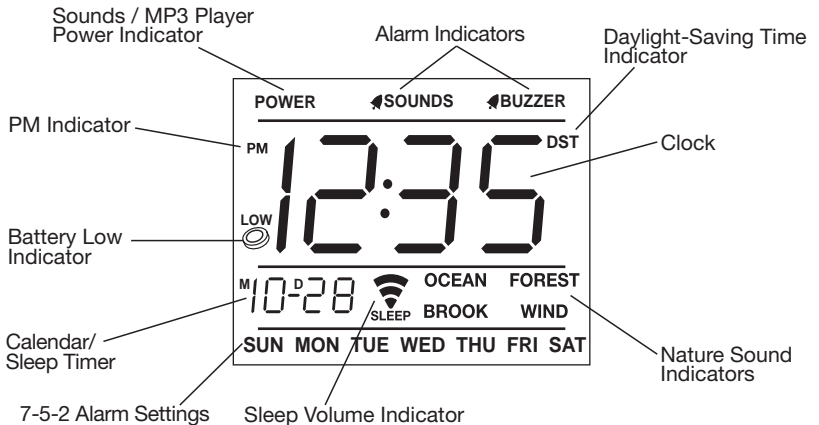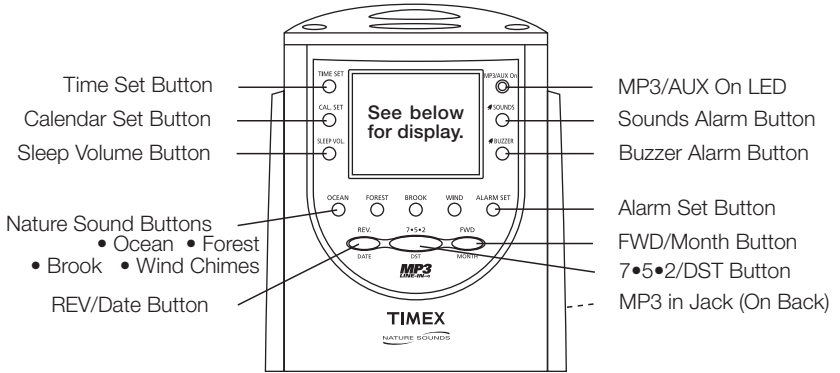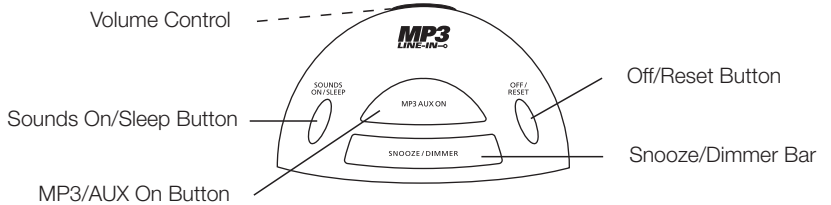

Installation and Maintenance

1. Remove the unit and all packing materials from the carton. You should save packing materials in case unit needs to be returned for service. If you do not wish to save the materials, please dispose of them properly.
2. Place the unit on a stable, level surface, close to an AC outlet, out of direct sunlight, and away from sources of dust, dirt, heat, water, moisture, vibration, and strong magnetic fields.
3. After installing the batteries (see below) and reading the Maintenance notes, plug the AC cord into an outlet.

 
“Sure Alarm” Battery Backup Installation

It is recommended that a CR-2032 battery be installed into the unit, as directed below, to activate the “Sure Alarm” battery backup feature. In the event that the AC power cord is disconnected or a power failure or other interruption occurs, the “Sure Alarm” system will maintain clock and alarm settings for the life of the batteries, ensuring that the alarm will sound at the set time (note: while operating on battery power, all set alarms will sound as a buzzer).

When power is restored, the clock will cease using battery power, and will again operate on AC power. The Battery Low Indicator shows if there is not enough battery power to run the backup.

To install backup battery:

1. Using screw driver to open the battery compartment door.
2. Install a CR-2032 battery into the battery compartment. Please make sure the polarity is correct as shown within the battery compartment.
3. Put the battery compartment back.

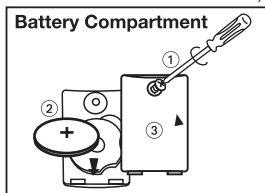

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can mar the surface of the case.
- If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

Setting Clock Time and Calendar

Important – While setting the time or calendar, if you do not press the appropriate buttons (as explained below) within approximately 8 seconds, the display will stop flashing. If this happens you must follow the instructions again from step 1.

Setting the Clock Time

1. Press and hold the **Time Set Button** until the display begins flashing.
2. Press the **FWD/Month** or **REV/Date Button** to select correct time. Remember to set the correct AM or PM. The **PM Indicator** is located on the upper left side of the time digits (there is no AM indicator).
3. Press the **Time Set Button** again to return the display to normal mode. You can also allow the display to flash for approximately 8 seconds to return to normal mode.

Note: While setting the time, if you press and hold the **FWD/Month** or **REV/Date Button** the minutes will begin counting at a moderate pace, then get faster. This will assist you in easily setting the time quickly and accurately.

Setting the Calendar

1. Press and hold the **Calendar Set Button** until the display begins flashing.
2. Press the **FWD/Month Button** to set the month.
3. Press the **REV/Date Button** to set the date.
4. Press the **7•5•2/DST Button** to set the day of the week.
5. Press the **Calendar Set Button** again to return the display to normal mode. You can also allow the display to flash for approximately 8 seconds to return to normal mode.

Daylight-Saving Time Adjustment

Depending your living area to turn on or off the daylight saving time adjustment feature.

1. Press and hold the **Time Set Button** until the display begins flashing.
2. Pressing the **7•5•2/DST Button** will toggle the DST (daylight saving time) adjustment feature on or off. The **DST indicator** will appear on the right side of display means daylight saving time adjustment feature is on.

Listen/Sleep to Nature Sounds



1. Press the **Sounds On/Sleep Button** once to turn on the sound.
2. Press the **Sounds On/Sleep Button** again to change to sleep mode so you can fall asleep to nature sounds. Remaining sleep time will show on the display.
3. You can adjust sleep timer from 90, 60, 30 or 15 minutes by pressing the button again. Pressing the button again when sleep to is at 15 minutes will turn off the nature sounds.
4. Press any of the four **Nature Sounds Buttons** (Ocean, Brook, Forest and Wind Chime). The chosen nature sound's indicator will flash on the lower right side of the display.
5. Adjust the **Volume Control** as desired.
6. To avoid affecting the alarm sound level, you can adjust the sleep volume by pressing the **Sleep Volume Button** as desired. The Sleep Volume icon will change to show volume selects.
7. To stop listening at anytime, press the **Off/Reset Button** to turn off the sound.

Alarm operation

This clock features two alarms that can be set and used independently. You can set both alarms to wake two people at different times, set alarm as a back-up to the other in case you shut off the first alarm and go back to sleep, or use one alarm for weekdays and the other for weekend wake up times.

Note: This clock also features "Sure Alarm" so that in the event a power failure occurs or the AC adapter is accidentally disconnected, if you have installed a CR2032 battery, the unit will change to Buzzer alarm to wake you up.

Setting the Alarm Time(s)

1. Press the **Alarm Set Button** until the display shows the **Alarm Indicator** for the alarm to be set:  **Sounds** or  **Buzzer**. The wake time for that alarm will flash.
2. Press the **FWD/Month** or **REV/Date Button** to adjust the time you want to wake up. Remember to set the correct AM or PM time. The **PM Indicator** is located on the upper left side of the time digits (there is no AM indicator).
3. Press the **7•5•2/DST Button** to choose whether the alarm will come on everyday, weekdays or weekend only.
4. Press the **Alarm Set Button** twice to return the display to normal mode. You can also allow the display to flash for approximately 8 seconds to return to normal mode.

Wake to Nature Sounds

1. Set the Nature Sounds alarm wake time as indicated in the *Setting the Alarm Time(s)* section.
2. Follow the instructions in the *Listening / Sleep to Nature Sounds* section to select a nature wake sound. The last nature sound played by the unit will function as the nature wake sound.
3. Adjust the **Volume Control** as desired. Remember that the **Sleep Volume Button** does not affect the alarm volume.
4. Press the **Sounds Alarm Button** to activate the alarm. The **Nature Sounds Alarm Indicator** will appear on the display.

Wake to Buzzer

1. Set the Buzzer alarm time as indicated under *Setting the Alarm Time(s)*.
2. Press the **Buzzer Alarm Button**. The **Buzzer Alarm Indicator** will appear on the top of the display.

Turn off the Alarm

1. After the alarm turns on, press the **Off/Reset Button** to turn off the alarm. The alarm will turn on again at the same time the following day unless the controls are changed.
2. To cancel any of the alarms, simply press the **Sounds** and/or **Buzzer Alarm Button** until the alarm indicator disappears from the top of the display.
3. If the alarm is not turned off after it sounds, it will sound for approximately 1 hour, then turn off automatically. This cycle will repeat every 24 hours unless the controls are changed.

Playing the MP3 / Aux Line-in

This unit comes with an AUX cord allowing you to connect the unit to your MP3 player (or other devices with an audio out) to play through the built in speakers.

1. Plug one end in your MP3 player's headphone or audio output jack and another end to the **MP3 in jack** on the rear side of the unit.
2. Press the **MP3 / Aux On Button**. The **MP3 / Aux On LED** will light, indicating the unit is ON.
3. Turn on your MP3 player to listen to your MP3s through the unit's speaker. Adjust the **Volume Control** as desired.

Note: To avoid distortion of sound, always set the volume level of the auxiliary device to a low or middle position, and adjust the desired volume level from the radio.

4. Press the **MP3 / Aux On Button** again to change to sleep mode. You can adjust sleep time from 90, 60, 30 or 15 minutes by pressing the button again. Press the button again when sleep to is at 15 minutes will turn off the unit.
5. Press **Off/Reset Button** to shut off unit.

Important! You should plug in the MP3 in cord for AUX input only and always unplug it for normal operation.

Snooze/Dimmer Operation

1. Press the **Snooze/Dimmer Button** under normal operation and using AC operation to change the brightness of display backlight.
2. Press the **Snooze/Dimmer Button** after the alarm sounds. The alarm will turn off and will come on again in approximately 9 minutes. **You may repeat this cycle several times during the 1 hours alarm cycle.**