

Model: T1212 1B (English Version)
 Color : Black text on white paper
 Size: 120 W x 170 H mm (folded)
 Date: Aug 31 2018

Operating Instructions

Connect AC adapter to DC jack completely and insert the plug into a 120V/60Hz AC outlet. Use an outlet that is always "live". Do not use an outlet that is controlled by a wall switch. When the clock is connected to the AC outlet for the first time the display will turn on and begin flashing "12:00 (PM)". If the back-up batteries were not installed, the Low Battery indicator will also be flashing.

Setting The Time

 
1. Press and hold the **CLOCK** button for 2 seconds until display starts to flash.



2. Press **HOURS** button to adjust the hour, then **MINS** button to adjust the minute.



Observe the **PM** indicator to confirm that you have set the hour correctly. If the **PM** indicator is lit, the hour on the display is **PM**. If the **PM** indicator does not appear the hour on the display is **AM**.



3. Press **CLOCK** again to confirm time setting.



Setting The Alarm Time

1. Press and hold **1** or **2** until the display starts flashing.



Setting The Alarm Time - Continued

2. Press **HOURS** button to adjust the hour, then **MINS** button to adjust the minute.



Note: Observe the **PM** indicator to confirm that you have set the hour correctly.

3. Press the corresponding alarm button - **1** or **2** repeatedly to choose to again to confirm your alarm settings.



4. When alarm sounds, press **1** or **2** or **ALM RESET** to shut off the alarm and reset it for the same time the following day.



To cancel the alarm, repeatedly press **1** or **2** to set the wake-to source to no alarm. The LED will disappear from the display.

Snooze Alarm

When alarm is sounding, press **SNOOZE/DIMMER** to delay the alarm for 9 minutes. This can be pressed numerous times up to one hour.

Display Dimmer Control

To adjust the brightness of the display, press **SNOOZE/DIMMER** to toggle between high and low settings.

AUX Mode (Audio Cable Not Included)

Plug one end of a 3.5mm audio cable into the **AUX** jack. Connect the other end into the headphone jack of your music device. Press and hold the **AUX** button until **AUX** appears on the display. Press play on your music device to play audio.

USB Charging Function

To charge your mobile device, connect the **USB** charging cable that was supplied with your device to the **USB** charging port on the front panel of this alarm clock. The output rating of the **USB** charging port is 1 Amp.

Limited 90 Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of ninety (90) days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-888-4491 for Return Authorization and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CDs or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from your state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2018 SDI Technologies, Inc. All rights reserved.
 Questions? Visit www.timexaudio.com
 or call 1-800-888-4491 Toll Free

TIMEX is a registered trademark of Timex Corporation in the United States and other countries.

Printed in China

T1212_1009B-A

TIMEX DUAL ALARM FM CLOCK RADIO WITH USB CHARGING

Model T2352



For additional information, online registration, and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
AVERTISSEMENT: POUR RÉDUIRE LE RISQUE D'ÉLECTROCUTION, NE PAS ENLEVER LE COUVERCLE NI LA PARTIE POSTÉRIEURE.
AVERTISSEMENT: POUR RÉDUIRE LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL SOUS LA PLUIE ET L'HUMIDITÉ.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this Polarized plug with an extension cord receptacle, or an outlet which does not have the correct configuration for this plug. Check the plug and outlet carefully to make sure they are fully inserted and locked together. Do not use a two-pronged plug with a three-pronged outlet. If the plug does not fit, do not force it. If the plug does not fit, do not use it. If the plug does not fit, do not use it. If the plug does not fit, do not use it. If the plug does not fit, do not use it. If the plug does not fit, do not use it.

FCC Information
 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this document are not authorized. The user is responsible for compliance with all applicable laws and regulations. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the manufacturer for additional information.

RF Interference: This device complies with Industry Canada's RSS-310. Operation is subject to the condition that the device must not cause harmful interference and must accept any interference, including interference that may cause undesired operation of the device.

A Consumer Guide to Product Safety

The appearance and the operation of this product are subject to change without notice. The user is responsible for compliance with all applicable laws and regulations. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the manufacturer for additional information.

RF Interference: This device complies with Industry Canada's RSS-310. Operation is subject to the condition that the device must not cause harmful interference and must accept any interference, including interference that may cause undesired operation of the device.

A Consumer Guide to Product Safety

 
IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Water and Moisture: Do not use this apparatus near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
6. Ventilation: Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. Heat: Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Power Sources: The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
9. Grounding or Polarization: Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Power-Cord Protection: Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
11. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
12. Non-Use Periods: The power cord of this unit should be unplugged from the outlet when it is to be left unused for a long period of time.
13. Objects and Liquid Entry: Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
14. Matchmarks: Only use attachment accessories specified by the manufacturer.
15. Lightning: Unplug this apparatus during lightning storms or when unused for long periods of time.
16. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
17. Damage Require Service: Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
18. Servicing: The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
19. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
20. Antenna: Do not attempt to connect an external antenna.

Questions? Service? Warranty? Visit www.timexaudio.com

Controls and Indicators

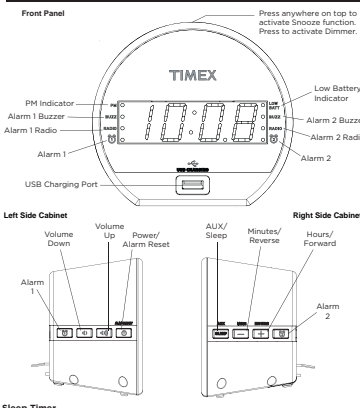

Sleep Timer

Press **Sleep/AUX** when radio is on to activate the sleep timer. Press repeatedly to cycle through 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes or OFF.

Tuning the Radio

Press the **Alarm Reset** button to turn on radio. Press **Hour** and **Mins** to adjust to the desired frequency. Press and hold the **Preset** button to save a station as a preset.

Preparation For Use

 
 
SureAlarm Battery Back-up System

Your new Timex Alarm Clock includes a SureAlarm battery backup system that will maintain the time and alarm settings, and even turn on the alarm during a temporary power interruption. The battery backup system requires two "AAA" batteries, not included. We recommend you use alkaline batteries for longest life and best performance. If you experience a power failure while batteries are installed, the display will not be visible but the clock will continue running and maintain your alarm setting. When power is restored, the display will turn on again and the time will be correct.

Installing the Batteries

Press in on the battery door to open and remove the battery door.

Install 2 "AAA" batteries, matching the (+ / -) markings in the battery compartment. Replace the door.



AC Adapter

Connect the included AC adapter to the DC jack located on back of the unit and plug into a working outlet not controlled by an on/off switch.

