 




# Color Changing Alarm Clock

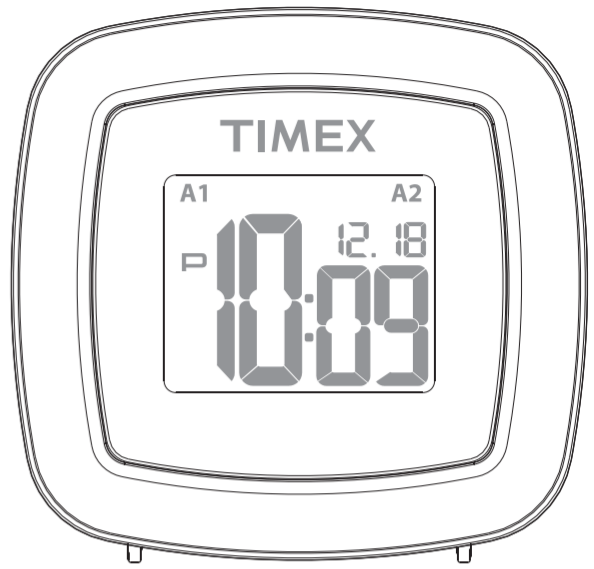

For additional information, online registration, and exclusive special offers visit our website:

[www.timexaudio.com](http://www.timexaudio.com)

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

## Limited 90 Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of ninety (90) days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-888-4491 for Return Authorization and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

### Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2017 SDI Technologies, Inc. All rights reserved  
 Questions? Visit [www.timexaudio.com](http://www.timexaudio.com)  
 or call 1-800-888-4491 Toll Free

TIMEX is a registered trademark of Timex Corporation in the United States and other countries.

T104-021617\_A

6. Press the **SET/AL SET Button** to confirm. The date digits will flash (1 -31). Press the **UP** or **DOWN Buttons** to adjust the display to the current date.



7. Press the **SET/AL SET Button** to confirm. The "SN" (for Snooze) appears and "05" will flash. Press the **UP** or **DOWN Buttons** to adjust the snooze duration from 5 - 60 minutes.



8. Press the **SET/AL SET Button** to confirm settings and exit clock setting mode.

*Important:* The calendar must be set correctly to the current Date / Month / Year to enable the Weekdays / Weekends alarm work properly.

### TO SET ALARM 1

1. At normal time display, press the **SET/AL SET Button** once, 6:00, **WEEKDAYS** and A1 appear.

2. *Press and hold* the **SET/AL SET Button** until the hour digit flash. Then press **▼** or **▲** to set alarm 1's hours. Press and hold for rapid adjustment.

3. Press the **SET/AL SET Button** again, the minute digits flash. Then press **▼** or **▲** to set Alarm 1's minutes. Press and hold for rapid adjustment.

4. Press the **SET/AL SET Button** once again, **WEEKDAYS** flash. Then press **▼** or **▲** to select :

- WEEKDAYS** Alarm 1 is active Monday to Friday
- WEEKENDS** Alarm 1 is active Saturday and Sunday
- WEEKDAYS WEEKENDS** Alarm 1 is active Monday to Sunday

5. Press the **SET/AL SET Button** once again (or no button press within 10 seconds) to exit the Alarm 1's setting.

### TO SET ALARM 2

To set Alarm 2, follow steps above, but press the **SET/AL SET Button 2x** to select Alarm 2, then press and hold to begin setting alarm 2. A2 will appear.

- To Turn On or Off Alarm 1 and 2
1. Press AL 1.2/ ON OFF once to activate Alarm 1, A1 appears.
  2. Press AL 1.2/ ON OFF once again to activate Alarm 2, A2 appears.
  3. Press AL 1.2/ ON OFF once again to activate both Alarm 1 and 2. Both A1 and A2 appear.
  4. Press AL 1.2/ ON OFF again to deactivate both alarms (both A1 and A2 disappear).

### TO USE THE SNOOZE ALARM

When time reaches your set alarm time, your clock will sound to wake you up. The A1 and/or A2 icon will flash. The LCD display and the front case will be illuminated with different color lights for around 45 sec. Press on top of the clock (or SNOOZE.LIGHT at bottom) once to stop the alarm temporarily, the "A1" or "A2" icon keeps flashing. The alarm will sound again according to the setting of your snooze duration. If no button is pressed, the alarm will continue to sound for 2 minutes and then shut off.

### TO STOP AND RESET THE ALARM TO COME ON THE NEXT DAY

When alarm 1 or 2 is sounding, the related alarm icon flashes. Press any of the bottom buttons except on the top of the clock (or Snooze.Light) once to stop the alarm and reset it to come on the following day. After that both A1 and/or A2 remain on the display.

### TO USE THE COLOR CHANGING LIGHT

1. At normal time display, press on top of the clock (or SNOOZE.LIGHT at bottom) once to light up the LCD display and front case. The light will last for 5 seconds and then go off.
2. Press on top of the clock one at a time to select different colors of the light.
3. Press and hold on top of the clock will activate the color-changing light (7 colors). The color changing light will last for around 45 seconds. When the

WARNING: constant use of the backlight will significantly reduce the life expectancy of the batteries.

### TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which may be caused by electro-static discharge or other interference, slide open the battery cover, take out the batteries and reinstall them by observing the correct +/- polarity. Your unit will be reset to default setting.

## FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

## A Consumer Guide to Product Safety

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the bottom of apparatus. Les précautions d'emploi sont inscrites en bas de l'appareil.
- The marking information is located at the bottom of apparatus. Les marquages sont inscrits en bas de l'appareil.

 
## A Consumer Guide to Product Safety

# IMPORTANT SAFETY INSTRUCTIONS

- This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards.
1. Read these Instructions.
  2. Keep these Instructions.
  3. Heed all Warnings.
  4. Follow all instructions.
- Water and Moisture** - Do not use this apparatus near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation** - Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- Heat** - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Grounding or Polarization** - Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- Attachments** - Only use attachments/accessories specified by the manufacturer.
- Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
- Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Questions? Service? Warranty? Visit [www.timexaudio.com](http://www.timexaudio.com)


## Controls and Indicators

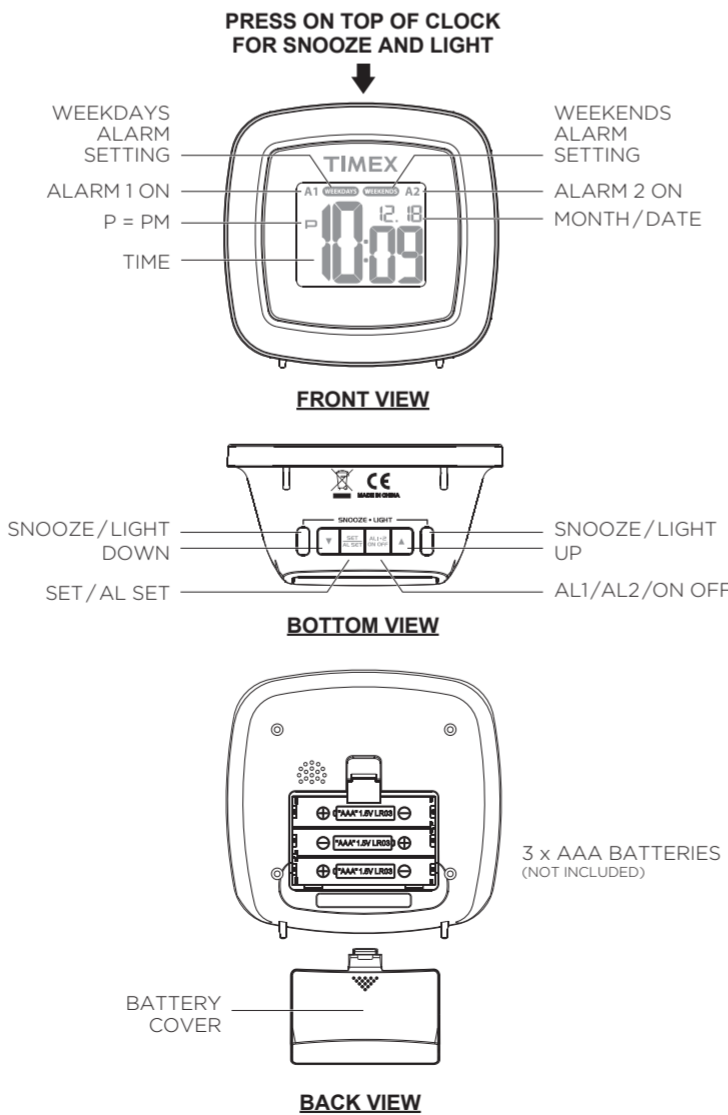

## Installing and Replacing Batteries

### This clock operates on 3 AAA batteries (not included)

 - Press in and downward on the battery door to open and remove the battery door.
- Install three "AAA" batteries in the battery compartment. Observe the polarity (+/-) markings in the battery compartment to make sure the batteries are inserted correctly.
- Replace the battery door.

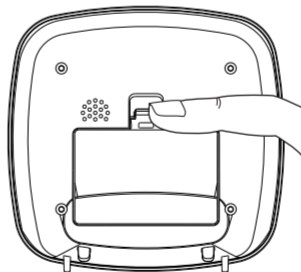

### Alkaline batteries are recommended for optimal usage of this clock.

### BATTERY SAFETY & DISPOSAL

- Dispose of batteries and electrical products responsibly at local authority household waste recycling facility.
- DO NOT dispose of batteries in a fire as the batteries may explode or leak.
- Only use "AAA" 1.5V batteries in this clock.
- Never use rechargeable batteries.
- Replace all batteries at the same time, NEVER mix new and used batteries, different brands or types.
- Never try to dismantle batteries.
- Never short circuit batteries.
- Exhausted batteries must be removed from the clock promptly.
- Remove batteries from the product before extended storage.

## Operating Instructions

When batteries are installed in the clock, the display will turn on and show "12:00".

### TO SET THE CLOCK

1. *Press and hold* the **SET/AL SET Button** on the bottom of the clock. The hour will flash. Press the **UP** or **DOWN Buttons** to adjust the hour.



Observe the PM indicator to confirm that you have set the hour correctly. If the PM indicator is lit, the hour on the display is PM. If the PM indicator does not appear the hour on the display is AM.

2. Press the **SET/AL SET Button** to confirm. The minutes will flash. Press the **UP** or **DOWN Buttons** to adjust the minutes (hold for rapid adjust).



3. Press the **SET/AL SET Button** to confirm. The "12 hr" will flash. Press the **UP** or **DOWN Buttons** to adjust the display to 24 hours if desired.



4. Press the **SET/AL SET Button** to confirm. The "Yr" appears and the "2014" will flash. Press the **UP** or **DOWN Buttons** to adjust the display to the current year.



5. Press the **SET/AL SET Button** to confirm. The month digits will flash (1 -12). Press the **UP** or **DOWN Buttons** to adjust the display to the current month.

