

 
### Operating Instructions

Connect AC adapter to DC jack completely and insert the plug into a 120V/60Hz AC outlet. Use an outlet that is always 'live'. Do not use an outlet that is controlled by a wall switch.

When the clock is connected to the AC outlet for the first time the display will turn on and begin flashing "12:00 (PM)". If the back-up batteries were not installed, the Low Battery indicator will also be flashing.

#### Setting The Time


1. Press and hold the **TIME** button while pressing the **HOURLY** button to advance to the desired hour, and then release both buttons.

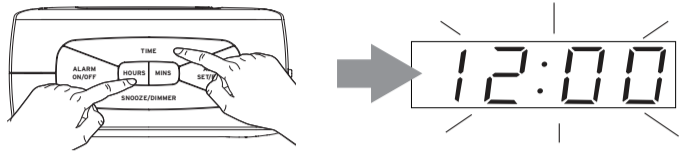

Observe the PM indicator to confirm that you have set the hour correctly. If the PM indicator is lit, the hour on the display is PM. If the PM indicator does not appear the hour on the display is AM.




 2. Press and hold the **TIME** button while pressing the **MINUTE** button to advance to the desired minute (hold for rapid advance), and then release both buttons. The time is now set and the clock is running.

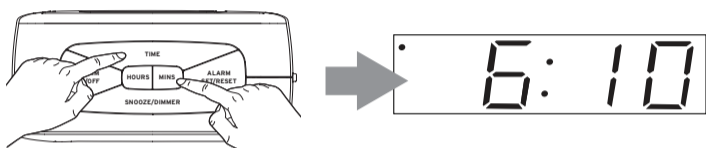


#### Setting The Alarm Time

 
1. Press and hold the **ALM Set/Reset** button first, then press the **HOURLY** button to advance to the desired wake up hour, then release both buttons. Observe the PM indicator to confirm that you have set the wake-up hour correctly. If the PM indicator is 'On' the wake-up hour on the display is PM. If the PM indicator does not appear the wake-up hour on the display is AM.

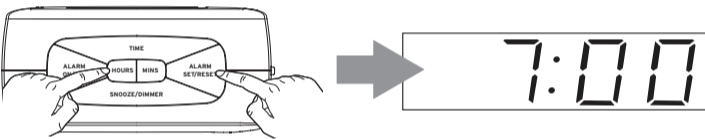

 2. Press and hold the **ALM Set/Reset** button first, then press **MIN** button to advance to the desired wake up minutes, and then release both buttons. The wake-up time is now set.

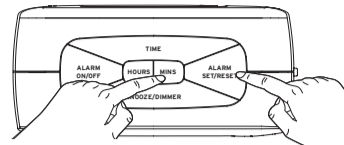

 3. To activate the alarm press the **ALM On/Off** button. The ALM indicator appears in the lower left corner of the display to confirm that the alarm is 'On'.

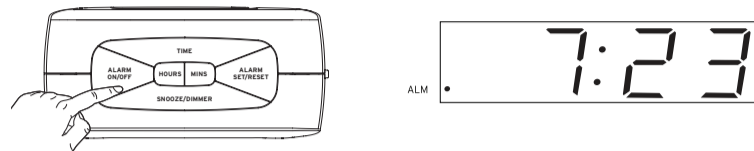

At the selected wake-up time the buzzer alarm will turn on. It begins softly and gradually increases in volume to wake you gently. The alarm sound will continue for one hour and then shut off and reset itself for the following day.

- To stop the alarm sooner, press the **ALM Set/Reset** button again. The alarm will shut off immediately and reset itself for the following day.
- To cancel the alarm so that it does not turn on again on the following day, press the **ALM On/Off** button until the ALM indicator no longer appears in the display.

**NOTE: Adjust the loudness of the alarm with the Alarm Loud/Soft switch on the right side panel.**

#### Snooze Alarm

For a few minutes extra sleep after the alarm turns on, press the **Snooze Bar** on the top panel. The alarm will stop for 9 minutes and then turn on again. The Snooze operation may be repeated several times within the first hour but after one hour the alarm will not turn on again. It will reset itself for the following day.

#### Display Dimmer Control

If you prefer to reduce the display brightness for sleeping, press and hold the **SNOOZE** bar once to select the low setting. Press once more to restore the display to maximum brightness.

#### USB Charging Function

This Timex alarm clock is equipped with a convenient USB charging port on the front panel that allows you to recharge mobile devices that are supplied with USB charging cables. The output rating of the USB charging port is 1Amp.

To charge your device, connect the USB charging cable that was supplied with your device to the USB charging port on the front panel of this alarm clock.

### Limited 90 Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of ninety (90) days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-888-4491 for Return Authorization and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

#### Disclaimer of Warranty

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2017 SDI Technologies, Inc. All rights reserved  
 Questions? Visit [www.timexaudio.com](http://www.timexaudio.com)  
 or call 1-800-888-4491 Toll Free

TIMEX is a registered trademark of Timex Corporation  
 in the United States and other countries.

T1210-010317\_A

Model T1210

**TIMEX**

**ALARM CLOCK  
 WITH USB CHARGING**



For additional information, online registration, and exclusive special offers visit our website:

[www.timexaudio.com](http://www.timexaudio.com)

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

### CAUTION

**RISK OF ELECTRIC SHOCK.  
 DO NOT OPEN**

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**  
**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**  
**AVERTISSEMENT: POUR RÉDUIRE LE RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, NE PAS EXPOSER CET APPAREIL SOUS LA PLUIE ET L'HUMIDITÉ**

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

**CAUTION:** To prevent electric shock, do not use this (Polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.  
**ATTENTION:** Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvrir.

### FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
 • NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(E)

### A Consumer Guide to Product Safety

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the bottom of apparatus.
- Les précautions d'emploi sont inscrites en bas de l'appareil.
- The marking information is located at the bottom of apparatus.
- Les marquages sont inscrits en bas de l'appareil.

### A Consumer Guide to Product Safety

 
## IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. **Water and Moisture** - Do not use this apparatus near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
6. **Ventilation** - Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **Heat** - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
9. **Grounding or Polarization** - Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Power-Cord Protection** - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
11. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
12. **Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
13. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
14. **Attachments** - Only use attachments/accessories specified by the manufacturer.
15. **Lightning** - Unplug this apparatus during lightning storms or when unused for long periods of time.
16. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
17. **Damage Require Service** - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
18. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
19. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
20. **Antenna** - Do not connect to an external antenna.

Questions? Service? Warranty? Visit [www.timexaudio.com](http://www.timexaudio.com)

### Controls and Indicators

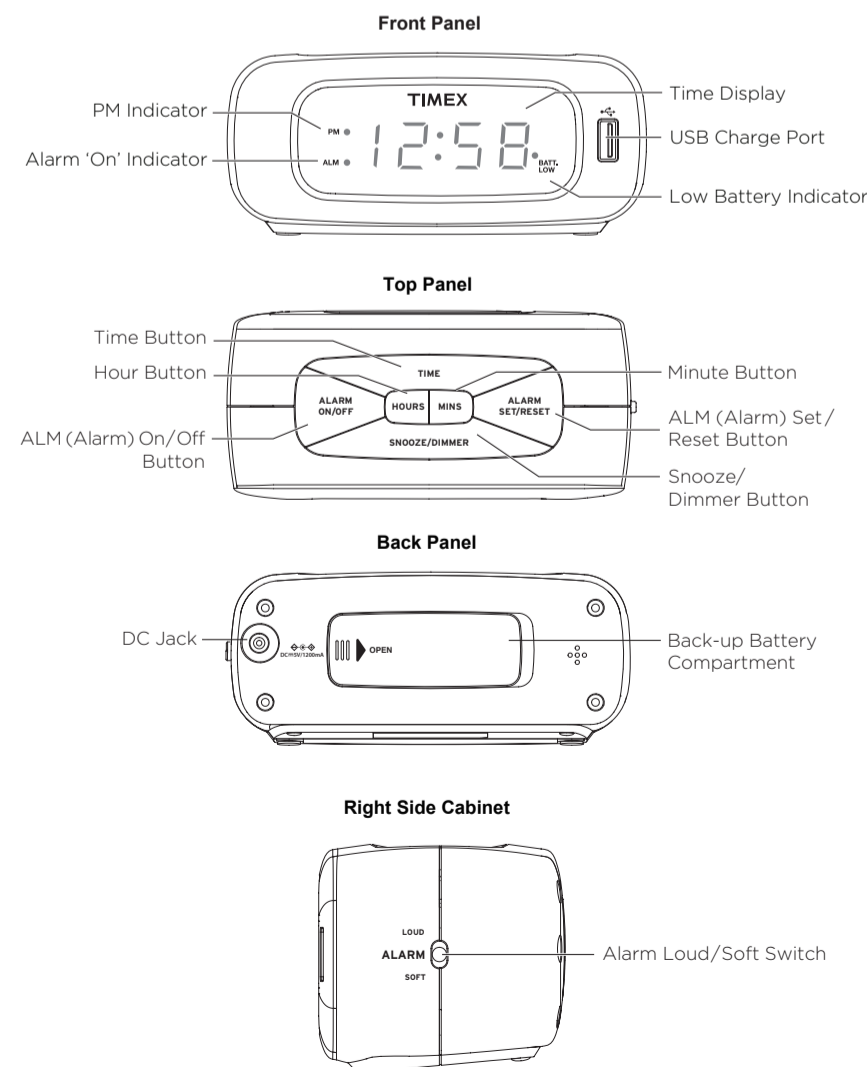


### Preparation For Use

#### SureAlarm Battery Back-up System

Your new Timex Alarm Clock includes a SureAlarm battery back up system that will maintain the time and alarm settings and even turn on the alarm during a temporary power interruption. The battery back up system requires two "AAA" batteries, not included. We recommend you use alkaline batteries for longest life and best performance. If you experience a power failure while batteries are installed, the display will not be visible but the clock will continue running and maintain your alarm setting. When power is restored the display will turn on again and the time will be correct.
 
#### Installing The Batteries

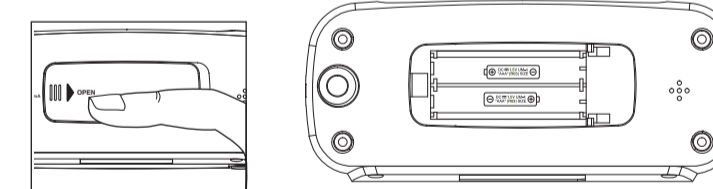

- Press in and rightward on the battery door to open and remove the battery door.
- Install two "AAA" batteries in the battery compartment. Observe the polarity (+/ - ) markings in the battery compartment to make sure the batteries are inserted correctly.
- Replace the battery door.

#### AC Adapter

Connect the included AC adapter to the DC jack located on back of the unit and plug into a working outlet not controlled by an on/off switch.

