 


# TIMEX®

Model T137

## Time Announcement Dual Alarm Clock with Nature Sounds

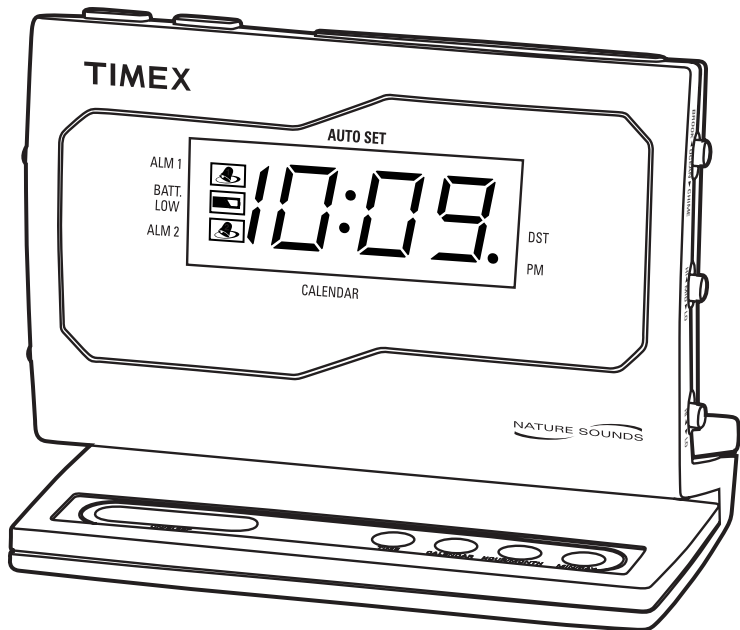

 
For additional information, online registration,  
and exclusive special offers visit our website:

[www.timexaudio.com](http://www.timexaudio.com)

For questions or comments regarding this or other products,  
please call our toll-free number 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.

# Controls and Indicators

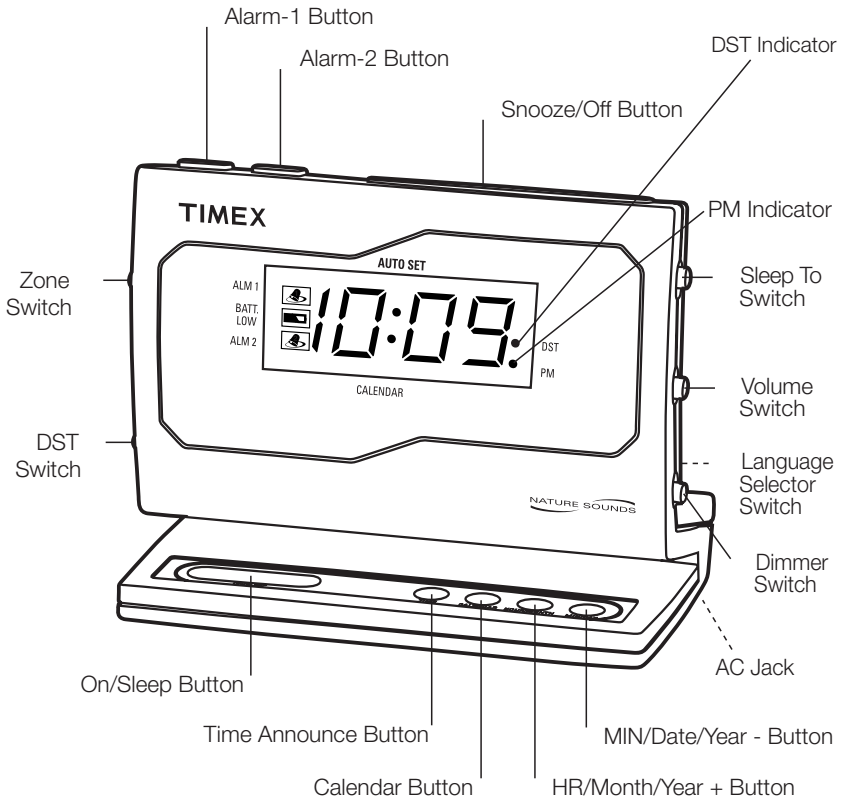

# Installation

---

The unit comes with 4 “LR44” button cell batteries already installed. These batteries are meant for in-store demonstration use only, and should be removed during normal operation.

**Note:** After installing the Battery Backup and reading through the Maintenance, plug the AC line cord correctly into a wall outlet. When the unit is connected to AC power for the first time the display may blink.

 
## Battery Backup

If the Backup Batteries have been installed and a power failure occurs or the AC cord is accidentally disconnected, the display will not remain lit, but the current time and alarm time settings will be temporarily maintained. If the Backup Batteries have not been installed or are dead, the battery low indicator will light up.

1. Open the battery compartment cover.
2. Insert three “AAA” R3 batteries, checking the + and – ends of the batteries. We recommend alkaline batteries. **Do not do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.**

**Note:** You should replace backup batteries if Battery Low Icon is lit.

3. Close the compartment cover.

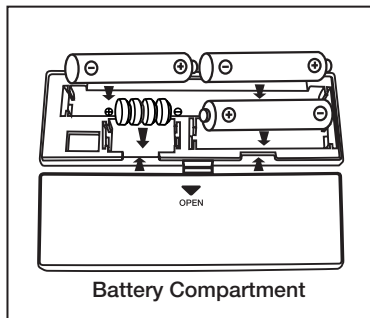

## Battery Low Indicator

The Battery Low Icon is located in the center of the left side of the display. When the icon lights up it is time to replace backup batteries.

## AC Adapter Operation

---

1. Plug the supplied AC adapter into the **AC Jack** on the back of the unit, then plug the cord into an outlet.
2. If you are using a different AC adapter than the one supplied, make sure that it is a 6V, 350mA AC adapter.

## Daylight-Saving Time

---

1. Depending on your living area and if Daylight Saving Time (DST) is observed, you can manually switch DST on (+1), OFF or use the AUTO setting.
2. To manually turn on the DST function, just set the **DST Switch** to +1. A small dot on the right hand of the display will appear for DST and the time will advance 1 hour.
3. To manually turn OFF the DST function, set the **DST Switch** to OFF. The time will go back 1 hour.
4. Set the **DST Switch** to AUTO to have the unit automatically adjust the time at the beginning and end of Daylight Saving Time each year.

# Setting Clock Time and Calendar

---

## Preset Clock

1. This unit has a preset clock with the time already set at the factory. Just set the Time Zone and Daylight Saving Time (DST) switches for your area.
2. Set the **Zone Switch** located on the left side of the unit to your time zone (ATL = Atlantic, EAS = Eastern, etc). Time Zone displays are as follows:

PAC	<i>PST</i> : Pacific Standard Time	<i>PdL</i> : Pacific Daylight savings Time
MTN	<i>MTST</i> : Mountain Standard Time	<i>MTdL</i> : Mountain Daylight savings Time
CEN	<i> CST</i> : Central Standard Time	<i>CdL</i> : Central Daylight savings Time
EAS	<i>EST</i> : Eastern Standard Time	<i>EdL</i> : Eastern Daylight savings Time
ATL	<i>AST</i> : Atlantic Standard Time	<i>AdL</i> : Atlantic Daylight savings Time

The correct time should show on the display.

3. If the time/day displayed is not correct, please follow below steps to set the clock and day.

## Setting Clock Time

1. Press and hold the **Time Announce Button** for a few seconds until the display flashes. Press the **HR/Month/Year+ Button** until the current hour is displayed. Remember to set the correct AM or PM. A small dot in the lower right hand corner of the display is the **PM indicator** (there is no AM indicator).
2. Press the **MIN/Date/Year- Button** until the correct minute time is displayed.
3. Press the **Time Announce Button** again (or if no button pressed in approx. 10 seconds) to exit the setting mode.

## Setting Day

1. Press and hold the **Calendar Button** for a few seconds until the display flashes, showing the year. Press the **HR/Month/Year+ Button** or **MIN/Date/Year- Button** until the correct year is displayed
2. Press and hold the **Calendar Button** again. The display will flash, showing month/date. Press the **HR/Month/Year+ Button** to adjust month, the **MIN/Date/Year-Button** for date until correct month/date is displayed.
3. Press the **Calendar Button** again (or if no button is pressed in approx. 10 seconds) to exit the setting mode.

## Alarm Operation

---

This alarm clock features two alarms that can be set and used independently. You can set both alarms to wake two people at different times, set one alarm as a back-up to the other in case you shut off the first alarm and go back to sleep, or use one alarm for weekdays and the other for weekend wake up times.

**Note:** This clock radio also features "Sure Alarm". If a power failure occurs or the AC cord is accidentally disconnected, if you have installed backup batteries, the unit will change to Buzzer alarm to wake you up.

## Time and Alarm Time Announcement

---

1. Slide the **Language Selector Switch** to select either English or Spanish.
2. Press the **Time Announce Button** once. The current time on the display will be announced in the selected language.
3. Press the **Alarm-1 Button** or **Alarm-2 Button** once to turn the alarm off. Press again to have the alarm time announced.

# Alarm Operation

---

## Setting Alarm 1 Time

1. Press and hold the **Alarm-1 Button** for a few seconds until the display flashes. Press the **HR/Month/Year+ Button** until the desired alarm hour is displayed. Remember to set the correct AM or PM. A small dot in the lower right hand corner of the display is the **PM indicator** (there is no AM indicator).
2. Press the **MIN/Date/Year- Button** until the desired alarm minute is displayed.
3. Press the **Alarm-1 Button** again (or if no button is pressed in about 10 seconds) to exit the setting mode.
4. To turn on the alarm, just press the **Alarm-1 Button** once. The alarm time will be displayed for a few seconds and the **Alarm-1 Icon** will appear in the upper left corner of the display indicating the alarm function is on. The alarm is now set to turn on automatically at the time selected.
5. When alarm is sounding, press the **Alarm-1 Button** to turn off alarm. The alarm will come on again the next day at the same time.
6. To stop the alarm from coming on the following day, press the **Alarm-1 Button** once to turn it OFF.
7. If the alarm is not turned off after it sounds it will play for approximately 1 hour then turn off automatically. This cycle will repeat every 24 hours unless the controls are changed.

## Setting Alarm 2 Time

1. Just follow Setting Alarm 1 Time directions, replacing Alarm-1 with Alarm-2.

## Listening / Sleep to Nature Sounds

---

1. Press the **On/Sleep Button** to listen to nature sounds.
2. Set the **Sleep To Switch** at the right-hand side of the unit to the desired sound. Set the **Volume Switch** to Hi, Mid or Low for desired volume level.
3. Press the **On/Sleep Button** again to change to sleep mode. The sleep timer will shut the nature sound off automatically. Remaining sleep time will show on the display.
4. You can adjust sleep timer from 90, 60, 30 or 15 minutes by pressing the button again. Pressing the button again while sleep is set to 15 minutes will turn off the unit.
5. To stop listening at anytime, press the **Snooze/Off Button** to turn off the unit.

## Snooze Operation

---

1. Press the **Snooze/Off Button** after the alarm sounds. The alarm will go off and will come on again in approximately 9 minutes. **You may repeat this cycle several times during the 1 hour alarm cycle.** You can also program the Snooze function to last from 1 to 30 minutes. To do so, press and hold the **Snooze/Off Button** until the display flashes. Press the UP or DOWN **Button** to select a snooze time, then press the **Snooze/Off Button** again to confirm.

## Dimmer Operation

---

1. Set the **Dimmer Switch** located on the right side of the unit to Hi or Low depending on the brightness in the room.

# IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, and adhere to all warnings on the unit and in the instruction and service manual.

1. **Water and Moisture** - The unit should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat source such as radiators, heat register, stoves, or other appliances (including amplifiers) that produce heat.
4. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** - This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
6. **Power Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords at plugs, convenience receptacles, and the points where they exit from the unit.
7. **Cleaning** - The unit should be cleaned only as recommended by the manufacturer.
8. **Nonuse Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.

9. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power-supply cord or plug has been damaged.
  - B. Objects have fallen into or liquid has been spilled into the enclosure.
  - C. The unit has been exposed to rain.
  - D. The unit has been dropped or the enclosure damaged.
  - E. The unit does not appear to operate normally or exhibits a marked change in performance.
11. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.

**For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.**

## **Maintenance**

---

1. Place the unit on a level surface away from sources of direct sunlight or excessive heat.
2. Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can mar the surface of the case.

## **Removing the Demo Pull-Tab**

---

Before normal operation, check the bottom of the unit to see if the Demo Pull-Tab, meant for in-store use only, is still in the **Demo Pull-Tab Slot**. If so, simply pull the tab out the slot and dispose of it properly.

## Limited 90-Day Warranty Information

---

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00. Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department  
SDI Technologies Inc.  
Timex Audio Products Division  
1330 Goodyear Dr.  
El Paso, TX 79936-6420

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TIMEX is a registered trademark of Timex Corporation the United States and other countries.