 


# TIMEX®

Model T600

**Stereo CD Clock with  
Digital AM/FM Tuning**

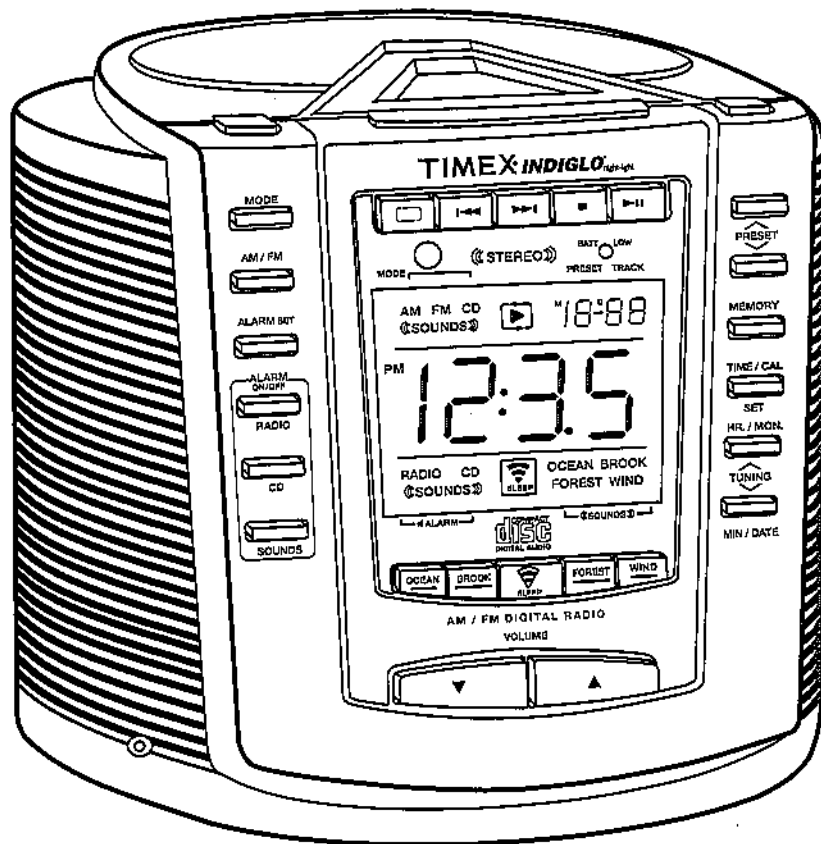



## CAUTION

**RISK OF ELECTRIC SHOCK.  
DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



*This symbol is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.*



*This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.*

**These symbols are located at the bottom of the cabinet.**

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot. Fully insert.

# Table of Contents

---

<b>A Consumer Guide to Product Safety</b> .....	3-5
FCC Information	
Laser Safety	
<b>Preparation for Use</b> .....	6-7
Maintenance	
Battery Backup Installation	
Battery Backup System	
<b>Controls and LCD Indicators</b> .....	8-9
<b>Setting the Clock Time and Calendar</b> .....	10
<b>Listening to the Radio</b> .....	11
Antenna Information	
Manual Tuning	
Auto Tuning	
Last Station Memory	
<b>Preset Station Memories</b> .....	12
<b>Recalling Preset Stations</b> .....	13
Changing Preset Stations	
<b>Playing Compact Discs</b> .....	14-15
High Speed Music Search	
<b>Playing Nature Sounds</b> .....	16
<b>Setting the Radio Alarm Time</b> .....	17
<b>Setting the CD Alarm Time</b> .....	18
<b>Setting the Nature Sounds Alarm Time</b> .....	19
<b>To Check Your Wake Up Settings</b> .....	20
<b>Setting Multiple Alarms</b> .....	20
<b>Alarm Reset and Snooze Operations</b> .....	20
<b>Sleep to Radio, CD or Nature Sounds</b> .....	21
<b>Indiglo® night-light Operation</b> .....	21
<b>Stereo Headphone Jack</b> .....	21
<b>Troubleshooting</b> .....	22-23
<b>Warranty</b> .....	24

## **A Consumer Guide to Product Safety**

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warnings, and always follow the instructions on the unit and in the instruction and service manuals.

1. **Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** - This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug.
6. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** - The unit should be cleaned only as recommended by the manufacturer.
8. **Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
9. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

## **A Consumer Guide to Product Safety**

10. **Damage Require Service** - The unit should be serviced by qualified service personnel when:
  - A. The power supply cord or plug has been damaged.
  - B. Objects have fallen into or liquid has been spilled into the enclosure.
  - C. The unit has been exposed to rain.
  - D. The unit has been dropped or the enclosure damaged.
  - E. The unit does not appear to operate normally or exhibits a marked change in performance.
11. **Antenna** - Do not connect to an external antenna.
12. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
13. If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions :  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The manufacturer is not responsible for any radio or TV interference cause by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

# A Consumer Guide to Product Safety

## **FCC Information**

This equipment complies with the limits for Class B digital devices as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area.

However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference you can try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.

Consult your dealer or an experienced radio/television technician if the problem still exists.

Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it. If your system is not performing as it should, call SDI Technologies Inc., Timex Audio Products Consumer Services, 1-800-888-4491 for assistance.

## **Laser Safety**

This unit employs a laser. Only a qualified person should remove the cover or attempt to service this device, because of possible eye injury.

**CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**DANGER:** INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED, AVOID DIRECT EXPOSURE TO BEAM.

**CAUTION:** HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

# Preparation for Use

---

## Preparation for Use

1. Remove the radio and all packing materials from the carton. You should save all packing materials if the unit ever needs to be returned for service. If you do not wish to save the materials, dispose of them properly.
2. Place the unit on a stable, level surface, close to an AC outlet, out of direct sunlight, and away from sources of excess dust, dirt, heat, water, moisture, vibration and strong magnetic fields.
3. Plug AC cord into an outlet.

**NOTE:** If you are going to install batteries for the Battery Backup System, they should always be installed before plugging in the AC cord. (See Battery Backup Installation).


## Maintenance

1. **Protect your furniture when placing the unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.**
2. You may clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine or other materials, can mar the surface of the case.

## Battery Backup Installation

1. For the use of the Battery Backup System, turn the unit over and remove the battery compartment door.
2. Install 3 "AA" batteries, while making sure that the + and - ends match up with those inside the battery compartment.
3. Close the battery compartment door, turn the unit over and plug back in the AC cord.

**NOTE:** We recommend using alkaline batteries for the longest life. When the batteries are getting weak a Battery Low LED Indicator will light on the upper right side above the display to let you know that it is time to install new ones.

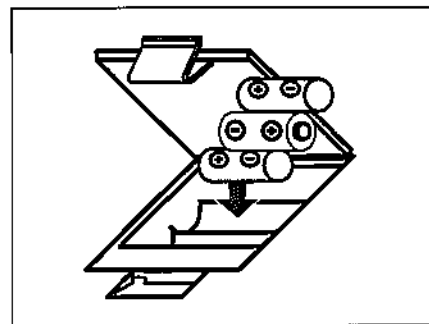

## **Preparation for Use**

---

### **Battery Backup System**


The Battery Backup system will maintain the time, date and alarm in the event of a power failure. If the power goes off the Radio, Nature Sounds, and CD will not play, but the display remains visible and the clock continues to run.

If you have set the alarm for Radio, Nature Sounds or CD and there is a power failure during your wake up time, the Radio, Nature Sounds or CD will default to Buzzer.


If the alarm has sounded and the Radio, Nature Sounds or CD are playing, then a power failure occurs, once again they will default to Buzzer.

If a power failure occurs and there are no batteries in the battery compartment, all time, alarm and memory settings will be lost. When power is restored the display will read 12:00 and the date will read 1-01.

# Controls and Indicators

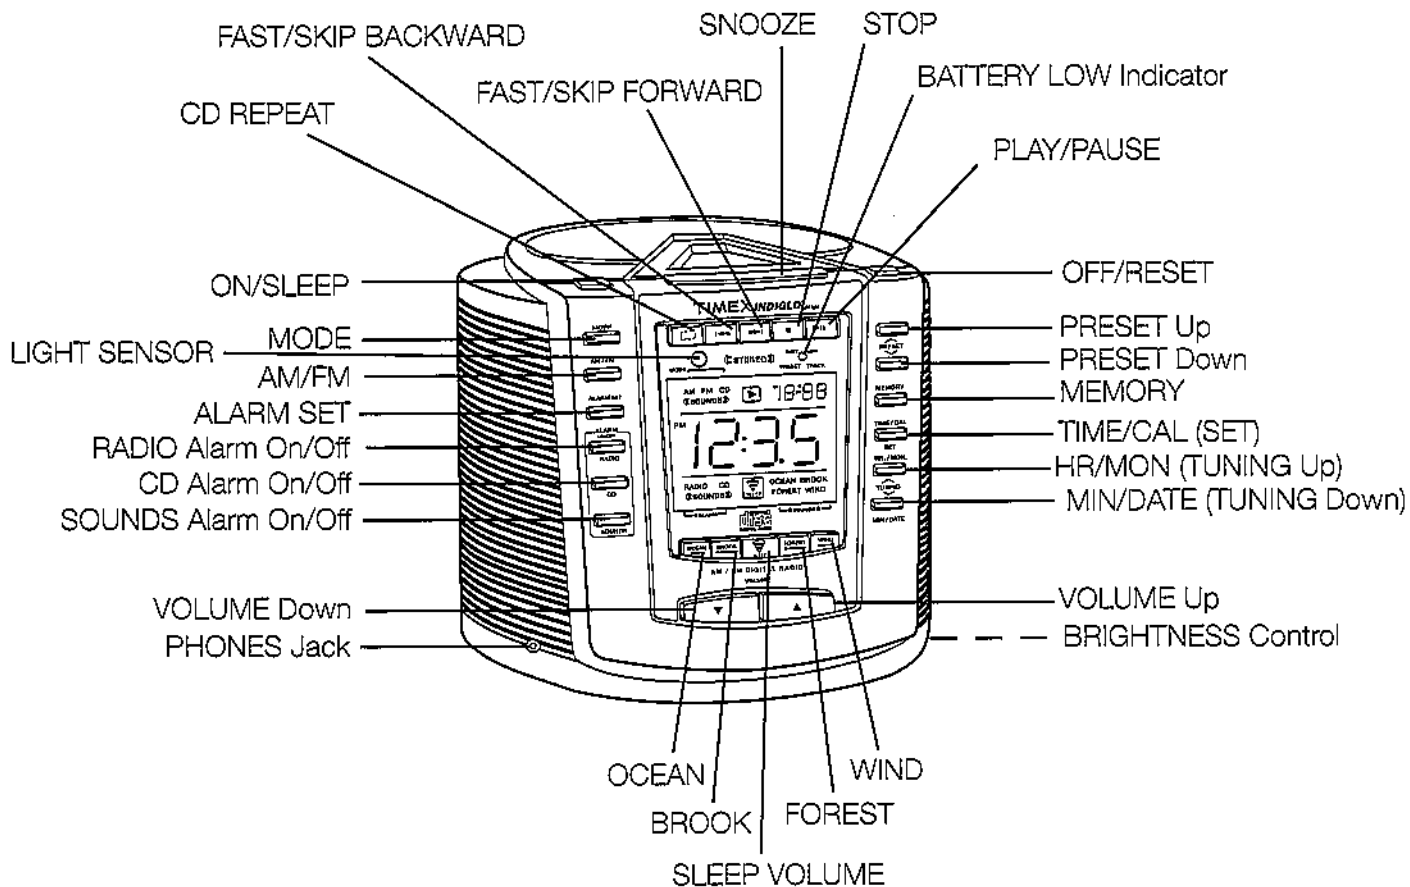


# LCD Display

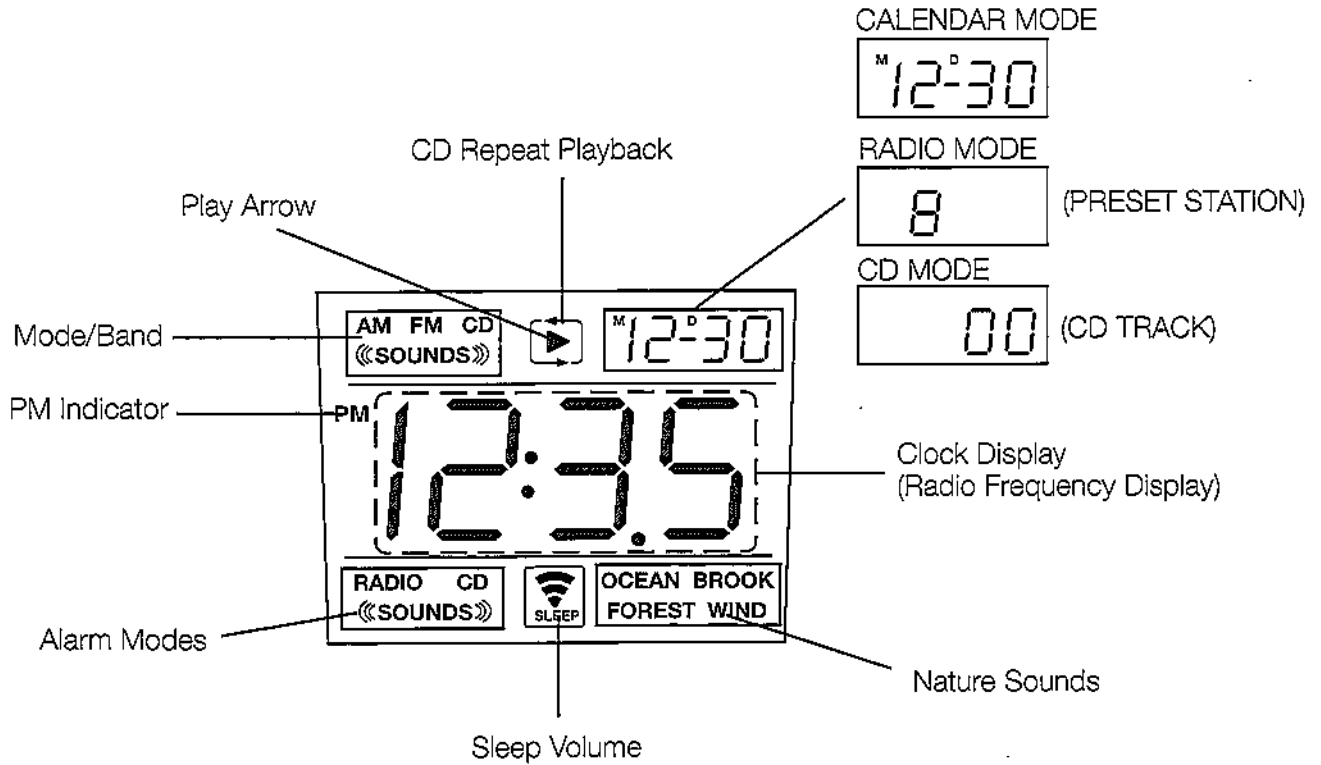

# Setting the Clock Time and Calendar

## Before you start please note the following:

While setting the Time or Calendar, if you do not press the HR/MON or MIN/DATE Button within 10 seconds, the display will stop flashing. If this happens you must press the TIME/CAL Button **Once** to enter the Setting Mode and **twice** to enter the Calendar Setting Mode.

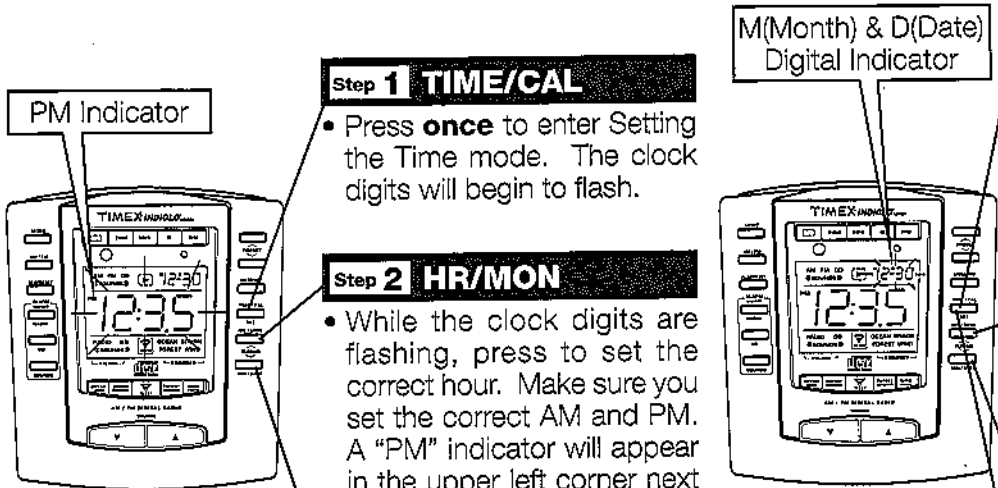

**PM Indicator**

**Step 1 TIME/CAL**

- Press **once** to enter Setting the Time mode. The clock digits will begin to flash.

**Step 2 HR/MON**

- While the clock digits are flashing, press to set the correct hour. Make sure you set the correct AM and PM. A "PM" indicator will appear in the upper left corner next to the current time display.

**Step 3 MIN/DATE**

- While the clock digits are flashing, press to set the correct minute.

**M(Month) & D(Date) Digital Indicator**

**Step 4 TIME/CAL**

- When the correct time is displayed and flashing, press once to enter the Setting the Calendar Mode. The Month and Date will begin to flash.

**Step 5 HR/MON**

- Press while the Month and Date digits are still flashing to set the correct month.

**Step 6 MIN/DATE**

- Press to set the correct date.

**Step 7 TIME/CAL**

- After the correct time and date are displayed, press once to exit the Setting Mode.

# Listening to the Radio

## Antenna Information

**FM** - Extend the FM wire antenna to its full length and vary the direction to find it's strongest signal.

**AM** - The AM bar antenna is inside the cabinet. Rotate the cabinet until you find the strongest AM signal.

**NOTE:** If the ON/SLEEP Button is pressed more than **once**, the unit will enter the Sleep Mode. The current time display will have changed to the Sleep Time Indicator (90, 60, 30, 15). Repeatedly press the ON/SLEEP Button until the current time appears on the display.

### ON/SLEEP

Step 1

- Press **once** to turn the power on.

### MODE

Step 2

- Press until the display changes to radio frequency.

### AM/FM

Step 3

- Press to choose AM or FM.

AM or FM  
Indicator

### Step 4 TUNING Up/Down


- Press to choose the station you desire.

### Step 5 VOLUME

- Press to adjust the volume

### Step 6 OFF/RESET

- Press to turn the power off.

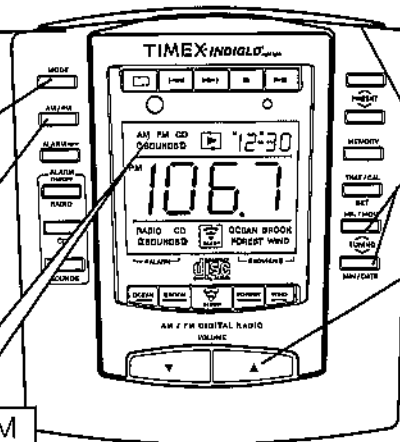

## Manual Tuning

Repeatedly press the TUNING Up or Down Button to find your desired station.

## Auto Tuning

Press and hold the TUNING Up or Down Button until the radio frequency begins to scan to the next strongest station.

## Last Station Memory

The tuner always remembers the last station selected before the radio was switched OFF and automatically selects the station again when the radio is turned ON.

# Preset Station Memories

This radio has a total of 18 preset station memories (6 AM and 12 FM preset stations). To enter stations in the units memory do the following:

## ON/SLEEP

Step 1

- Press **once** to turn the power on.

## MODE

Step 2

- Press until the display changes to radio frequency.


## AM/FM

Step 3

- Press to choose AM or FM.

AM or FM Indicator

Preset Station

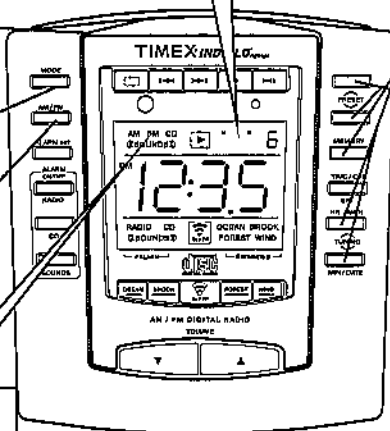

## Step 4 TUNING Up/Down

- Press to select the station.

## Step 5 MEMORY

- Press MEMORY once while the station is displayed. The radio station digits will begin to flash.

## Step 6 PRESET Up/Down

### SEE NOTE BELOW

- While the digits are flashing, press the Up or Down PRESET Buttons until you find the preset number you want to store the station in.


## Step 7 MEMORY

- Press MEMORY again, the station will now be set.

**NOTE:** If you do not press the Preset Buttons in step 6 within 10 seconds the station frequency will stop flashing. Press Memory button twice and proceed to step 6 again.

**To Preset more stations simply follow the instructions above.**

# Recalling Preset Stations

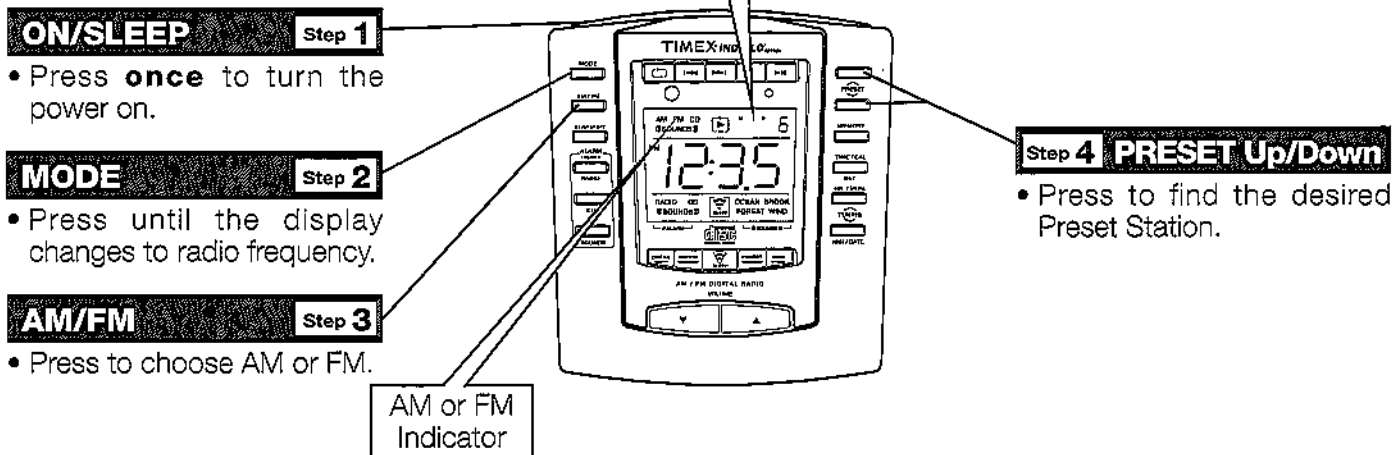

## Changing Preset Stations

To change a Preset Station simply follow the instructions for Preset Station Memories and enter a new station into the preset number you wish to change. The new station will be “remembered” and the previous station will be “forgotten”.

# Playing Compact Discs

## NOTE:


- Do not open the CD door during playback or while the disc is spinning in the pause mode. Always press the Stop Button and wait for the disc to stop before opening the door.

### CD DOOR

Step 1

- Push down gently where it is labeled "PUSH" on the CD player door to open it up, then place a compact disc on the CD spindle with the printed label side facing up. Close the CD player door.

PUSH

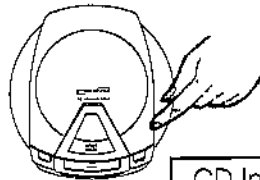

### ON/SLEEP

Step 2

- Press **once** to turn the power on.

### MODE

Step 3

- Press until the CD indicator appears and the date digits change to "00" track digits. The disc will spin momentarily and the track digit number that showed "00" will now show the number of tracks on the disc.

Play Arrow Indicator

CD Indicator

### Step 4 PLAY/PAUSE

- Press to begin the playback. The track digit number will change to 1 and a Play arrow indicator will appear. When the CD advances to the next song, the track digit number will change in order (1,2,3 etc.).


### Step 5 VOLUME Up/Down

- Press to adjust the volume.


### Step 6 STOP

- Press to stop the playback.

CD Track

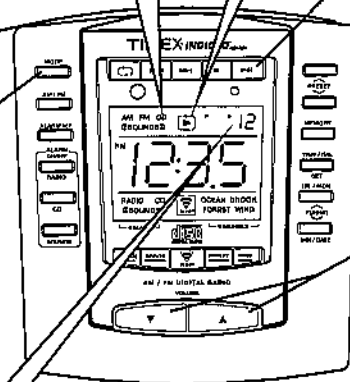

# Playing Compact Discs

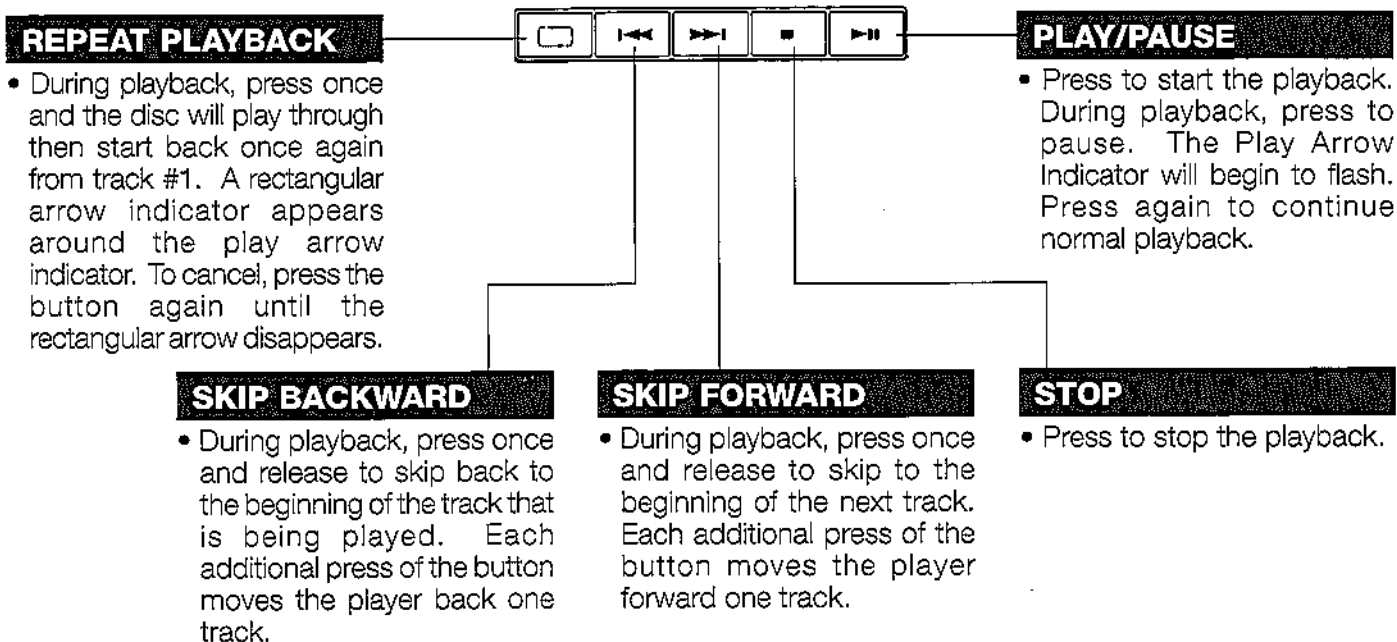

## High Speed Music Search

This feature allows you to search forward or backward within a particular track to locate a specific musical passage.

While the disc is playing press and hold the SKIP FORWARD ( **▶▶** ) or SKIP BACKWARD ( **◀◀** ) Button. The player will search rapidly forward or backward as long as the button is held and will resume normal playback when the button is released.

**NOTE:** The volume level is automatically reduced during high speed music search.

# Playing Nature Sounds

## ON/SLEEP Step 1

- Press **once** to turn the power on.

## MODE Step 2


- Press until the «SOUNDS» indicator appears on the display.

«SOUNDS» Indicator

## NATURE SOUNDS Step 3

- Press any one of the 4 Nature Sounds. The sound you select will appear on the display.

Nature Sounds Indicator

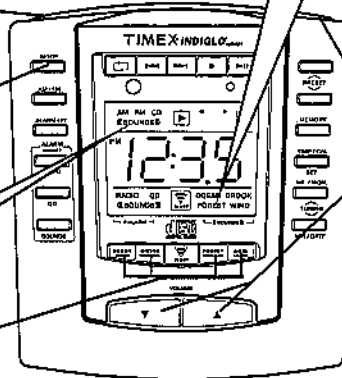

## Step 4 VOLUME Up/Down

- Press to adjust the volume.

## Step 5 OFF/RESET

- Press to turn the power off.

**NOTE:** *Playing the Nature Sound of your choice will not affect the one that is programmed for wake up time.*

# Setting the Radio Alarm Time

**Before you start please note the following:**

**NOTE:** While setting the alarm times, the display will return to the current clock time if no button is pressed within 10 seconds. You may exit the Setting Mode at anytime by simply pressing the ALARM SET Button repeatedly until the current clock time is displayed.

**NOTE:** Before setting the Radio Alarm Time, you must preset the radio station you wish to wake to into the preset memory. See Preset Station Memories.


## INDIGLO night-light Operation

### ALARM SET Step 1

- Press until the Radio alarm indicator flashes on the display.

### AM/FM Step 2

- Press to choose AM or FM.

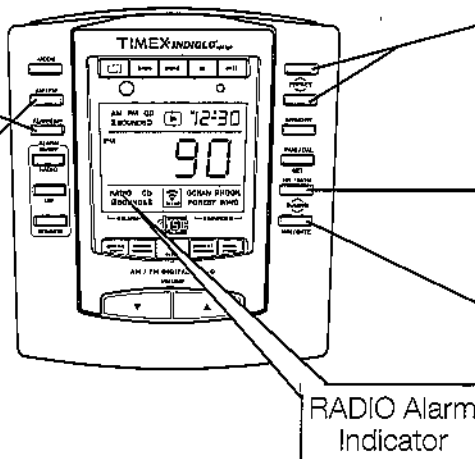

### Step 3 PRESET Up/Down

- Press to select the preset station you desire to wake up to.

### Step 4 HR/MON

- Press to set the alarm Hour.

### Step 5 MIN/DATE

- Press to set the alarm Minute. Then press ALARM SET **three times** to return to the current time display.

### NOTES:

- You can wake to 3 different alarm times by setting different wake up times for the Radio, CD and/or Nature Sounds. To activate all or any of the three alarms, simply press the RADIO, CD or SOUNDS Alarm On/Off buttons.
- To cancel any of the Radio, CD or Nature Sounds Alarm(s) simply press the RADIO, CD or SOUNDS Alarm On/Off Button(s) until the alarm indicator disappears from the lower left hand corner of the display.
- After the Alarm turns on, press the OFF/RESET Button to turn off the Alarm. The Alarm will come on again the following day unless the controls are changed.


### IMPORTANT!!

### Step 6 Alarm on/off Radio

- Press until the "RADIO" alarm Indicator appears on the display to confirm that Wake to Radio is on.

## Setting The CD Alarm Time

**NOTE:** Be sure to insert the CD you wish to wake to. If the alarm is set and there is no CD in the CD player, the alarm will default to Buzzer.

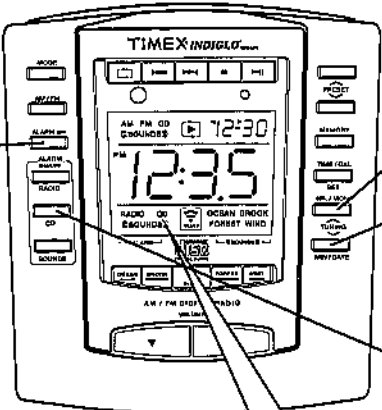

The diagram shows a Timex Indiglo CD alarm clock. The display shows the time 12:35 and the date 12-30. The CD alarm indicator is highlighted with a box and a callout line. The clock has buttons for WAKE, ALARM ON, ALARM OFF, BACK, CD, SOUNDS, OFF/RESET, and buttons for setting the alarm (HR, MIN, DATE, SET).

**Step 1 ALARM SET**

- Press until the CD alarm indicator flashes on the display.

**Step 2 HR/MON**

- Press to set the alarm Hour.

**Step 3 MIN/DATE**

- Press to set the alarm Minute. Then press ALARM SET **twice** to return to the current time display.

**IMPORTANT!!**

**Step 4 Alarm on/off CD**

- Press until the "CD" alarm indicator appears on the display to confirm that Wake to CD is on.

CD Alarm Indicator

*If you wish to wake to the Buzzer, follow the 'Setting the CD Alarm Time' instructions, then simply make sure there is no CD in the CD Player.*

### NOTES:

- You can wake to 3 different alarm times by setting different wake up times for the Radio, CD and/or Nature Sounds. To activate all or any of the three alarms, simply press the RADIO, CD or SOUNDS Alarm On/Off buttons.
- To cancel any of the Radio, CD or Nature Sounds Alarm(s) simply press the RADIO, CD or SOUNDS Alarm On/Off Button(s) until the alarm indicator disappears from the lower left hand corner of the display.
- After the Alarm turns on, press the OFF/RESET Button to turn off the Alarm. The Alarm will come on again the following day unless the controls are changed.

# Setting The Nature Sounds Alarm Time

## ALARM SET

Step 1


- Press until the «SOUNDS» alarm indicator flashes on the display.

## NATURE SOUNDS

Step 2

- While «SOUNDS» and clock digits are flashing, press Ocean, Brook, Forest or Wind to choose the sound you desire.

Nature Sounds Indicator

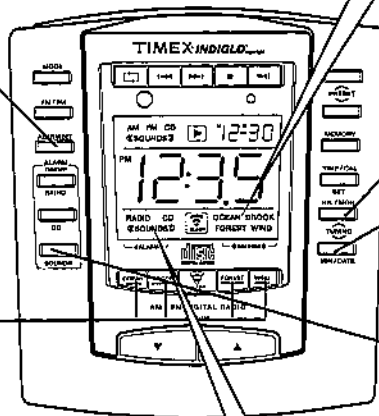

Step 3 HR/MON

- Press to set the alarm Hour.

Step 4 MIN/DATE

- Press to set the alarm Minute. Then press ALARM SET **once** to return to the current time display.

## IMPORTANT!!

Step 5 Alarm on/off SOUNDS

- Press until the “ «SOUNDS» ” alarm indicator appears on the display to confirm that Wake to Nature Sounds is on.

## NOTES:

- You can wake to 3 different alarm times by setting different wake up times for the Radio, CD and/or Nature Sounds. To activate all or any of the three alarms, simply press the RADIO, CD or SOUNDS Alarm On/Off buttons.
- To cancel any of the Radio, CD or Nature Sounds Alarm(s) simply press the RADIO, CD or SOUNDS Alarm On/Off Button(s) until the alarm indicator disappears from the lower left hand corner of the display.
- After the Alarm turns on, press the OFF/RESET Button to turn off the Alarm. The Alarm will come on again the following day unless the controls are changed.

## **To Check Your Wake Up Settings**

- Press the ALARM SET Button to change the current clock time to the flashing alarm time display with the flashing alarm indicator in the lower left corner. Repeatedly press the ALARM SET Button until you see the RADIO, CD or «SOUNDS» alarm indicator and the corresponding time on the display.


## **Setting Multiple Alarms**

- You can wake to 3 different alarm times by setting different wake up times for the Radio, CD and/or Nature Sounds. To activate all or any of the three alarms, simply press the RADIO, CD or SOUNDS Alarm On/Off buttons.
- To cancel any of the Radio, CD or Nature Sounds Alarm(s) simply press the RADIO, CD or SOUNDS Alarm On/Off Button(s) until the alarm indicator disappears from the lower left hand corner of the display.

## **Alarm Reset and Snooze Operation**

- After the Alarm turns on press the OFF/RESET Button to turn off the alarm. The Alarm will come on again the following day unless the controls are changed.
- At the selected wake up time(s), if the OFF/RESET Button is not pressed, the Radio, CD and/or Nature Sounds alarm(s) will play for one hour, then stop automatically and reset itself for the following day. The CD will play for 1 hour or as long as the inserted CD plays if less than 1 hour. To stop the alarm play period sooner, press the OFF/RESET Button.
- If you need a few minutes extra sleep when the alarm turns on, press the SNOOZE bar. The alarm will turn off, then come back on again in approximately 10 minutes. You may repeat this cycle several times during the 1 hour time period.

## Sleep to Radio, CD or Nature Sounds

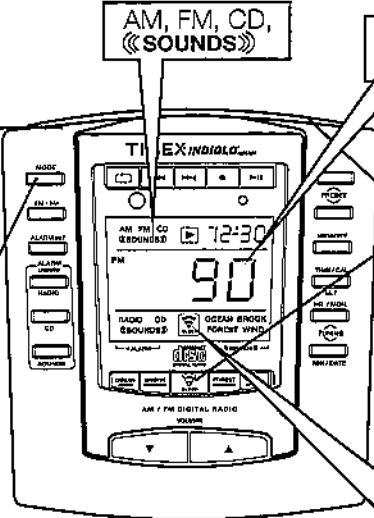

The diagram shows a car stereo with the following callouts:

- AM, FM, CD, ((SOUNDS))**: Callout pointing to the top of the display.
- 90, 60, 30, 15 Sleep timer Indicator**: Callout pointing to the '90' on the display.
- ON/SLEEP Step 1**: Callout pointing to the 'MODE' button.
- MODE Step 2**: Callout pointing to the 'MODE' button.
- Step 3 SLEEP VOLUME**: Callout pointing to the 'VOLUME' knob.
- NOTE OFF/RESET**: Callout pointing to the 'OFF/RESET' button.
- Sleep Volume Indicator**: Callout pointing to a Wi-Fi symbol on the display.

**ON/SLEEP Step 1**

- Press **twice** to enter the Sleep Mode and then press again to choose the sleep time in 90, 60, 30, 15 minute increments. The Sleep Volume Indicator will appear on the display.

**MODE Step 2**

- Press to select the AM, FM CD or Nature Sounds.

**Step 3 SLEEP VOLUME**

- Press to select the Sleep Volume Level. The Sleep Volume will not effect the Wake Up Volume Level.

**NOTE OFF/RESET**

- Press at any time to turn off the Radio, CD or Nature Sounds **before** the sleep time has elapsed.

**NOTE:** If there is no sound while adjusting the Sleep Volume, raise the volume with the main Volume UP Button.

### INDIGLO® night-light Operation

Your unit features an INDIGLO® night-light to assist you in reading the time in a darkened room.

Brightness Control - Adjust the brightness of the clock display, as desired, when the room is darkened.

**NOTE:** When the room is lighted, the Light Sensor shuts off the INDIGLO® night-light to prolong its life.

### Stereo Headphone Jack

Connect a pair of stereo headphones (not included), to the jack for private listening. The built-in speakers are shut off when headphones are connected.

**IMPORTANT:** You must disconnect the headphones from the headphone jack before you go to sleep or you will not hear the built-in speakers when the alarm sounds.

# Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
There is no display and the radio will not play	<ul style="list-style-type: none"> <li>• The unit is disconnected from the AC outlet</li> <li>• The AC outlet has no power</li> <li>• The AC outlet is controlled by a wall switch that is "Off"</li> </ul>	<ul style="list-style-type: none"> <li>• Connect to an AC outlet</li> <li>• Try the unit on another outlet</li> <li>• Do not use an outlet that is controlled by a wall switch</li> </ul>
The battery indicator is 'On'	<ul style="list-style-type: none"> <li>• Batteries have not been installed correctly in the battery compartment</li> <li>• Batteries are weak or exhausted</li> </ul>	<ul style="list-style-type: none"> <li>• Install "AA" batteries according to the polarity markings in the battery compartment</li> <li>• Install now "AA" batteries</li> </ul>
Poor FM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Try adjusting the direction of the FM wire antenna</li> </ul>
Poor AM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Rotate the cabinet to try and gain better reception</li> </ul>
Unit is 'On' but there is low or no volume at all	<ul style="list-style-type: none"> <li>• Headphones are connected to the headphone jack</li> <li>• The main volume has been turned all the way down</li> <li>• The unit is in the Sleep Mode with the sleep volume set low</li> </ul>	<ul style="list-style-type: none"> <li>• Disconnect the headphones</li> <li>• Raise the volume with the VOLUME Up Button</li> <li>• Adjust the main and/or sleep volume</li> </ul>
Unit shuts 'Off' unexpectedly	<ul style="list-style-type: none"> <li>• The unit was in the Sleep Mode instead of the Power On Mode</li> <li>• The unit was turned 'On' by the alarm and the alarm time ended</li> </ul>	<ul style="list-style-type: none"> <li>• Press the ON/SLEEP Button to turn the unit on</li> </ul>
Cannot preset stations	<ul style="list-style-type: none"> <li>• Stations can only be preset while the display is flashing</li> </ul>	<ul style="list-style-type: none"> <li>• Press the MEMORY Button to start the display flashing and then continue to preset stations (See page 12)</li> </ul>
CD skips while playing	<ul style="list-style-type: none"> <li>• Dirty or defective discs</li> <li>• Dirty lens</li> </ul>	<ul style="list-style-type: none"> <li>• Check the bottom of the disc and clean if necessary with a soft cleaning cloth, always wipe from the center out</li> <li>• Clean with a commercially available lens cleaner</li> </ul>

# Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Cannot set the clock or alarm time	<ul style="list-style-type: none"> <li>The display must be flashing</li> </ul>	<ul style="list-style-type: none"> <li>Press the TIME/CAL or ALARM SET Button to start the display flashing and then adjust the clock or alarm time (See pages 10, 17, 18, 19)</li> </ul>
The alarm does not come on	<ul style="list-style-type: none"> <li>The alarm was not set correctly for AM or PM</li> <li>Alarm indicators are not on the display</li> </ul>	<ul style="list-style-type: none"> <li>Check the alarm time setting</li> <li>Set the alarm 'On' by pressing the RADIO, CD and/or SOUNDS Buttons so that the corresponding alarm indicator is displayed in the bottom left corner of the display (See pages 17, 18, 19, 20)</li> </ul>
The alarm comes on at an incorrect time	<ul style="list-style-type: none"> <li>The wrong alarm indicator was on the display</li> </ul>	<ul style="list-style-type: none"> <li>Make sure that the alarms you wish to wake to are the only alarm indicators that appear on the display (See pages 17, 18, 19, 20)</li> </ul>
The wrong radio station or static is heard when the radio alarm turns on	<ul style="list-style-type: none"> <li>The station you think you are waking to has not been preset into memory</li> </ul>	<ul style="list-style-type: none"> <li>Make sure you have set the radio station into the preset memory before setting the radio alarm (See pages 12 and 17)</li> </ul>
Buzzer alarm is heard when waking to a CD	<ul style="list-style-type: none"> <li>A CD was not inserted into the CD player</li> <li>The CD was inserted incorrectly inside the player</li> <li>Compartment lid is not closed</li> <li>There was a power failure</li> </ul>	<ul style="list-style-type: none"> <li>When waking to CD, always make sure a CD is inserted</li> <li>Always insert the CD with the label surface facing up</li> <li>Push down gently until the door is completely closed (See page 14)</li> <li>All alarms will default to the buzzer as long as working batteries have been loaded into the battery backup compartment</li> </ul>
INDIGLO® night-light is too bright or not bright enough	<ul style="list-style-type: none"> <li>The brightness control was not adjusted</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the brightness control to your desire</li> <li>The INDIGLO® night-light will shut off in bright light to prolong it's life</li> </ul>

If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491

## Limited One-Year Warranty

---

SDI Technologies Inc., Timex Audio Products Division, warrants this product to be free from defects in workmanship and material under normal use and conditions for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts there of, to the store where it was originally purchased. If you need to send the product for service and it is during the first 90 days of the warranty period, SDI Technologies Inc. will repair, or at its discretion, replace this product with proof of purchase, without charge (except for a \$10.00 charge for handling, packing, return UPS/postage and insurance). After 90 days the cost of labor is the customer's responsibility. The fee for service after the warranty period or without proof of purchase is \$30.00.

Before returning this product for service, replace the batteries (if applicable) with fresh ones, because exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Also enclose a check or money order payable to the order of SDI Technologies Inc., for the sum of \$10.00 (or \$30.00 after the warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department  
SDI Technologies Inc.  
Timex Audio Products Division  
8889 Gateway West  
El Paso, Texas 79925

Please Note: This warranty is valid only in the United States of America. Any applicable implied warranties are also limited to 90 days, and SDI Technologies Inc. will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.**

**TIMEX is a registered trademark of Timex Corporation in the U.S. and other countries.**

**INDIGLO is a registered trademark of Indiglo Corporation in the U.S. and other countries.**