

## Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$30.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$10.00 (\$30.00 after warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

SDI TECHNOLOGIES INC.  
135 ESSEX AVENUE  
AVENEL, NEW JERSEY 07001

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the U.S. and other countries.

 
T625IB-040904-01

Printed in China

# TIMEX®

Model T625

## Nature Sounds Auto-Set CD Clock Radio with Preset Tuning

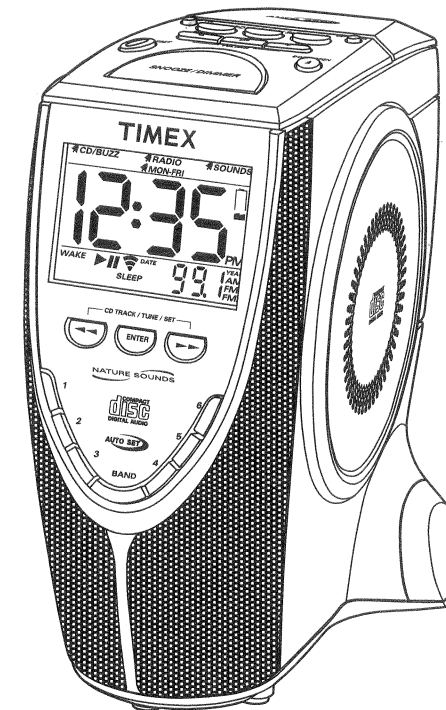

For additional information, online registration,  
and exclusive special offers visit our website:

[www.timexaudio.com](http://www.timexaudio.com)

For questions or comments regarding this or other products,  
please call our toll-free number 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.

## A Consumer Guide to Product Safety

### FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with the limits for a Class B digital device as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area.

However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference you can try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.

Consult your dealer or an experienced radio/television technician if the problem still exists.

Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it. If your system is not performing as it should, call SDI Technologies Inc., Timex Audio Products Consumer Services, 1-800-888-4491 for assistance.

 
### Laser Safety

This unit employs a laser. Only a qualified person should remove the cover or attempt to service this device, because of possible eye injury.

**CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**DANGER:** INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED, AVOID DIRECT EXPOSURE TO BEAM.

**CAUTION:** HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK OF UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



*The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.*



*The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.*

**The symbols above are located at the back of the cabinet.**

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot. Fully insert.

**ATTENTION:** Pour éviter les choc électriques. Introduire la lame la plus large de la fiche dans la borne correspondante de la prises et pousser jusqu'au fond.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

## Table of Contents

<b>A Consumer Guide to Product Safety</b> .....	3-5
Safety Instructions	
FCC Information	
Laser Safety	
<b>Installation and Maintenance</b> .....	7
Installation	
"Sure Alarm" Battery Backup Installation	
Maintenance	
<b>Controls and Indicators</b> .....	8
<b>LCD Display with Indicators</b> .....	9
<b>Auto-Set Time and Date Settings</b> .....	10
<b>Daylight-Saving Time and Leap Year Adjustments</b> .....	10
<b>Manual Time and Date Settings</b> .....	11
<b>Listening to Compact Discs</b> .....	11-12
Playing Compact Discs	
Using the Repeat Functions	
Using the Random Functions	
Performing a High-Speed Music Search	
Activating the Bass Boost Feature	
<b>Listening to the Radio</b> .....	13
Operating the Radio	
Programming Radio Station Settings	
Antenna Information and Adjustment	
Last Station memory	
<b>Operating the Alarms</b> .....	14-15
Setting Alarm-1 for CD Track or Beeping Alarm Sound	
Setting Alarm-2 for AM/FM Radio	
Setting Alarm-3 for Nature Sounds	
Checking Your Alarm Settings	
Turning Off the Alarms	
<b>Sleeping to Compact Discs</b> .....	16
<b>Sleeping to the Radio with Timer</b> .....	16
<b>Sleeping to Nature Sounds with Timer</b> .....	17
<b>Stereo Headphone Jack</b> .....	17
<b>Adjusting the Display Brightness</b> .....	17
<b>Troubleshooting</b> .....	18-19
<b>Warranty Information</b> .....	20

## A Consumer Guide to Product Safety

# IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool, or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug, or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** – This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug by forcing the plug into the outlet.
6. **Power Cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** – The unit should be cleaned only as recommended by the manufacturer. See the Maintenance section of this manual for cleaning instructions.

## A Consumer Guide to Product Safety

8. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
9. **Attachments** – Do not use attachments not recommended by the product manufacturer.
10. **Lightning and Power Surge Protection** – Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
11. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
12. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cord or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
13. **Antenna** – Do not connect an external antenna to the unit.
14. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged from the unit and any batteries removed to prevent damage or corrosion.
15. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.
16. **Safety Check** – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.**

## Installation and Maintenance

### Installation

 
1. Remove unit and all packing materials from the carton. You should save packing materials in case unit needs to be returned for service. If you do not wish to save the materials, please dispose of them properly.
2. Place the unit on a stable, level surface, close to an AC outlet, out of direct sunlight, and away from sources of dust, dirt, heat, water, moisture, vibration, and strong magnetic fields.
3. After installing the backup (see below) and reading the Maintenance notes, plug the AC cord into an outlet.

### “Sure Alarm” Battery Backup Installation

It is strongly recommended that 3 “AA” batteries be installed into the unit, as directed below, in order to activate the “Sure Alarm” Battery Backup. In the event that the power cord is disconnected or a power interruption occurs, the “Sure Alarm” Battery Backup will maintain clock and alarm settings for the life of the battery, ensuring that the alarm (buzzer only) will sound at the set time. Note: the backlight will not function while on battery power.

1. Gently turn the unit over and remove the battery compartment door.
2. Install 3 “AA” batteries (alkaline is recommended for longer life), making sure that the + and – ends match up with the diagram printed inside the battery compartment.
3. Slide the battery compartment door back on, making sure the door locks into place, and gently turn the unit over.


The display's **Battery Low Indicator** will flash when no batteries are installed, or when the batteries are weak or installed incorrectly.

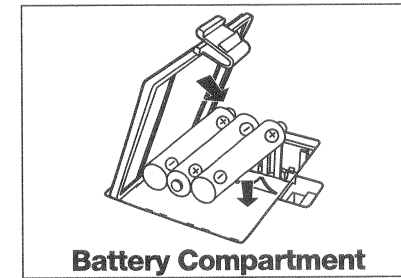


### Maintenance

1. Place the unit on a level surface away from direct sunlight or sources of excessive heat.
2. Protect your furniture when placing the unit on natural wood or wood with a lacquered or coated finish. A cloth or other protective material should be placed between the unit and the furniture.
3. Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials, are not recommended as they may damage the surface of the case.
4. If the unit is not to be used for a prolonged period, remove the batteries to prevent possible corrosion. Should the compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.
 
# Controls and Indicators

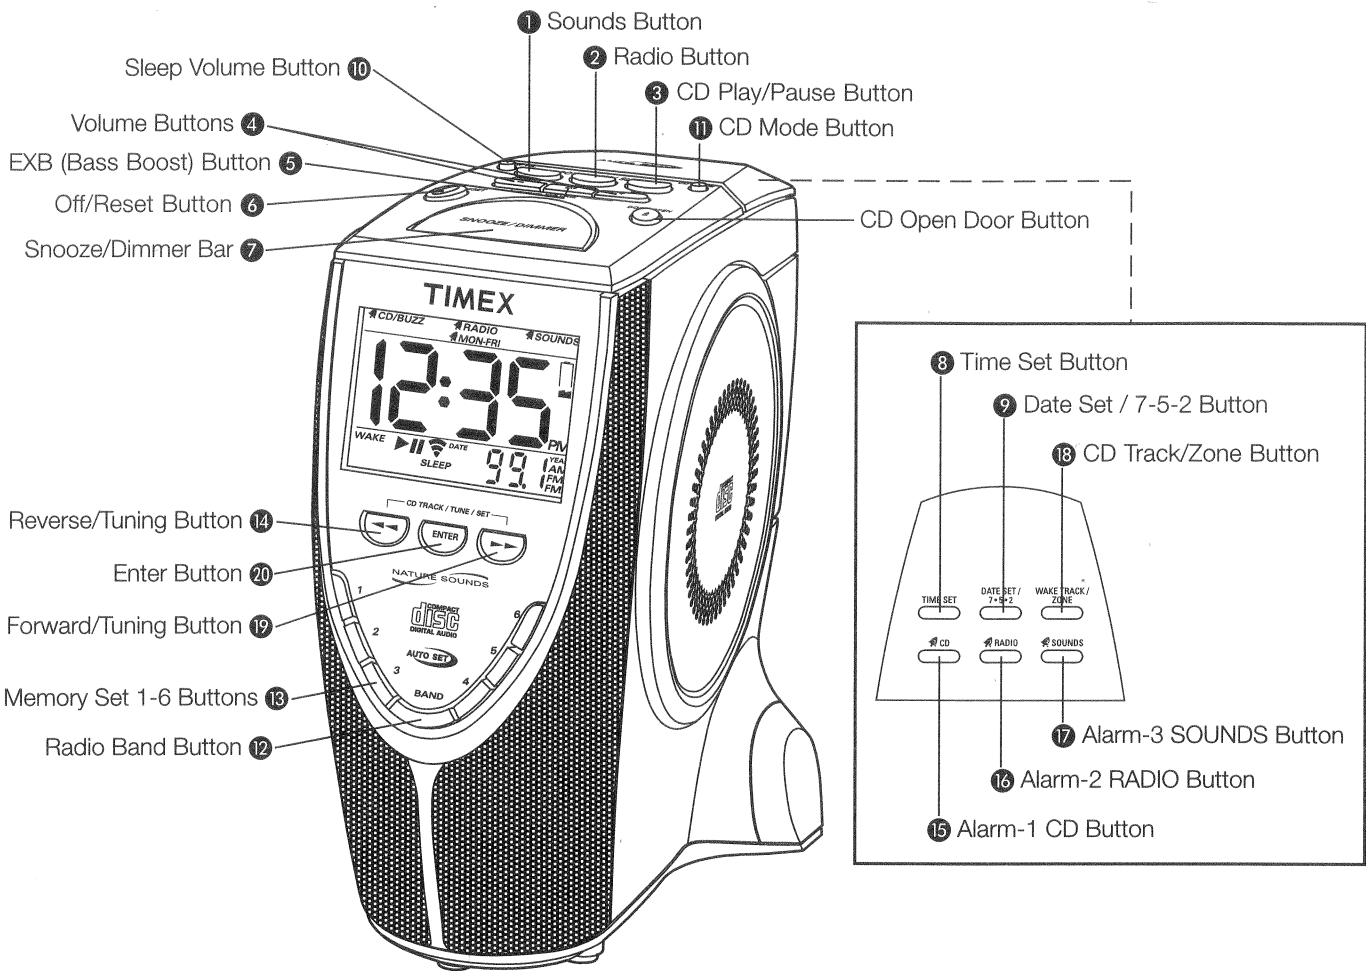

# LCD Display With Indicators

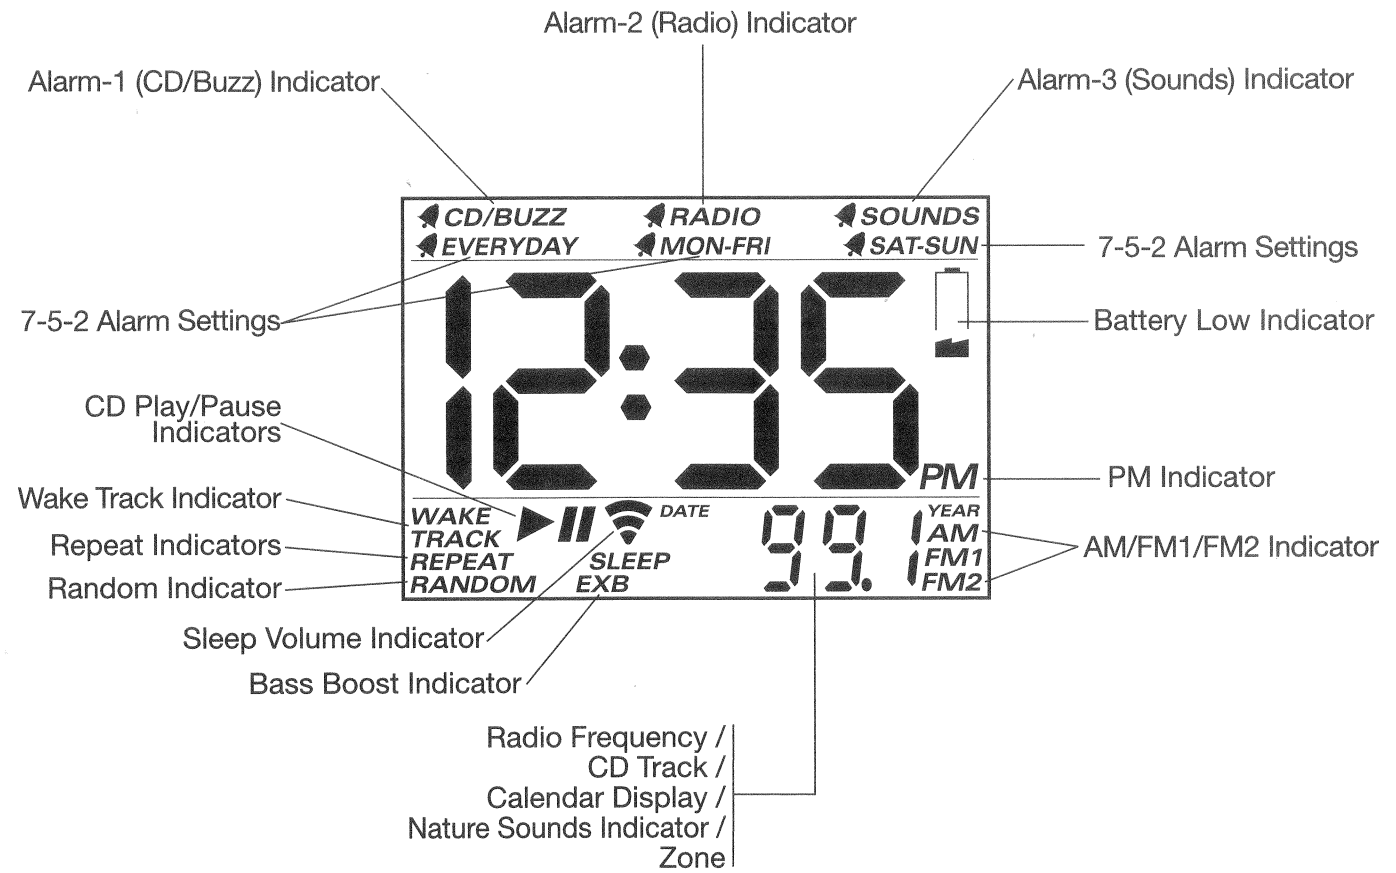 

## Auto-Set Time and Date Settings

---

This model is equipped with Auto-Set, meaning that the time and date have been programmed at the factory and will already be set when you first plug in the model. Auto-Set will automatically adjust the clock and calendar for daylight-saving time and leap years. Auto-Set is pre-programmed for Eastern Standard Time; if you do not live in this time zone, you can easily switch the setting to one of six other time zones.

1. To change your time zone setting, press and hold the **18 CD Track/Zone Button**. The current Auto-Set Time Zone in the bottom of the display will flash for approximately ten seconds. The setting can only be adjusted while flashing.
2. While the Auto-Set Time Zone is flashing, press the **14 Reverse** and **19 Forward Buttons** to select your time zone. The display will show each zone's current time setting. There are seven zones to choose from:

### Auto-Set Time Zones

**Z01** —→ **Atlantic Standard Time**

**Z02** —→ **Eastern Standard Time**

**Z03** —→ **Central Standard Time**

**Z04** —→ **Mountain Standard Time**

**Z05** —→ **Pacific Standard Time**

**Z06** —→ **Alaskan Standard Time**

**Z07** —→ **Hawaiian Standard Time**

3. Find your time zone and then press the **20 Enter Button**, or wait about ten seconds for the clock to beep twice and the setting to lock into place.

## Daylight-Saving Time and Leap Year Adjustments

---

This unit will automatically adjust the clock at the beginning and end of Daylight-Saving Time each year. It will also automatically adjust the month/day display for leap years.

This unit automatically advances one hour at the start of Daylight-Saving Time on the first Sunday of April, and moves back one hour at the end of Daylight-Saving Time on the last Sunday of October. If you live in an area that does not observe Daylight-Saving Time, it will be necessary for you to manually adjust the clock back one hour at the beginning of Daylight-Saving Time and forward one hour at the end of Daylight-Saving Time.

## Manual Time and Date Settings

---

1. To change the time setting, press and hold the **8 Time Set Button** so that the clock display begins flashing.
2. While the display is flashing, press the **14 Reverse** or **19 Forward Buttons** to set the time. Hold a button for a few seconds to set the time rapidly. Be sure to set the correct AM/PM time, shown by the PM Indicator.
3. After setting the time, press the **20 Enter Button**, or wait about ten seconds for the clock to beep twice and the setting to lock into place.
4. To change the calendar, press and hold the **9 Date/7-5-2 Button** until the display shows the flashing year.
5. Press the **14 Reverse** or **19 Forward Buttons** to set the current year. When the year has been set, press the **20 Enter Button**, then use the **14 Reverse** or **19 Forward Buttons** to set the month/day.
6. Press the **15 Enter Button** after setting the date, or wait for the display to beep twice and lock into place.

## Listening to Compact Discs

---

### Playing Compact Discs

1. Press the **Open Door Button** and place a CD on the spindle with the printed side facing out, then gently close the CD Player door.
2. Press the **3 CD Play/Pause Button** once. The display will show "On" before returning to the clock display. The first track will start playing. The bottom of the display will show the **CD Track Indicator**.
3. Adjust the volume using the **4 Volume Buttons**.
4. To pause the CD, press the **3 CD Play/Pause Button** while the CD is playing. The display will show the **Pause Indicator (//)**. Press the **3 CD Play/Pause Button** again to continue play.
5. Press the **19 Forward Button** to skip to the next track. Press the **14 Reverse Button** to return to the beginning of the current track. Press the **14 Reverse Button** again to skip to the previous track.
6. To stop play before the CD has ended, press the **6 Off/Reset Button**.

## Listening to Compact Discs (Continued)

### Using the Repeat Functions

1. Press the **11 CD Mode Button** once to repeat the track that is currently playing. The **Repeat Indicator** will flash on the display, indicating that this function has been activated.
2. Press the **11 CD Mode Button** again to repeat the entire CD. The **Repeat Indicator** will stop flashing and remain on the display, indicating that the Repeat All function has been activated.
3. When a repeat function is activated, the CD will play until stopped or the function is cancelled. To cancel the repeat functions, press the **11 CD Mode Button** until no Repeat indicators appear on the display.

### Using the Random Functions

1. To play CD tracks in a random order, press the **11 CD Mode Button** until the **Random Indicator** appears on the display. This can only be done while a CD is playing. All of the tracks on the CD will play once, in a random order. After all the tracks have played, the CD will shut off.
2. To combine the Random and the Repeat All functions, press the **11 CD Mode Button** again so that the display shows the **Repeat Random Indicator**. The CD Player will now continue to play tracks in a random order until the CD Player or the function is turned off.
3. To cancel the random functions, press the **11 CD Mode Button** until no indicators appear on the display.

### Performing a High-Speed Music Search

Press and hold the **14 Reverse** or **19 Forward Button** to search for specific passages within a CD track. When you find the passage you are searching for, release the button. The high-speed search can only be performed while the track is playing.

### Activating the Bass Boost Feature

To enhance the bass sound of your music, press the **5 EXB Button** so that the **EXB Indicator** appears on the display. This can only be done while a CD is playing. To turn off this feature, press the **5 EXB Button** again so that the **EXB Indicator** no longer appears on the display.

## Listening to the Radio

### Operating the Radio

1. Press the **2 Radio Button** once to turn on the radio. The display will show "On" before returning to the clock display. The bottom of the display will show the digital radio frequency.

**Note:** If the **2 Radio Button** is pressed more than once, the unit will enter the sleep mode, with the radio operating on a timer. See *Sleeping to the Radio with Timer* for more information about this feature.

2. Press the **12 Radio Band Button** to select a band. There are two different FM bands (to be used when programming preset radio station settings) and one AM band.
3. Press the **14 Reverse/Tuning** or **19 Forward/Tuning Button** to find a radio station. To scan the radio stations, hold a button for about three seconds. The radio will rapidly advance to the next strong signal.
4. You may also use the **13 Memory Set 1-6 Buttons** to select a preset radio station. See the *Programming Radio Station Memories* section for instructions on programming radio station settings.
5. Adjust the volume using the **4 Volume Buttons**.
6. Press the **6 Off/Reset Button** to turn the radio off. The bottom of the display will show the calendar setting.

### Programming Radio Station Settings

The radio features 18 programmable radio station settings so you can access your favorite stations quickly.

1. Tune to the first station you wish to program into your preset station settings.
2. Press and hold one of the six **13 Memory Set 1-6 Buttons** to program the station into that memory slot. When the unit beeps, the station setting has been saved.
3. Continue programming a total of 18 stations into memory: six each into the two FM bands and six into the AM band. To edit a setting, simply program a new frequency into the memory slot.

### Antenna Information and Adjustment

**FM** – Extend the FM wire antenna to its full length and vary the direction to its strongest signal.

**AM** – The AM bar antenna is located inside the cabinet. Rotate the unit to find the strongest AM signal.

### Last Station Memory

The tuner always remembers the last station selected before the radio was switched off, and automatically selects the station again when the radio is turned on.

## Operating the Alarms

---

This clock radio features a triple alarm system, with three alarms that can be operated independently. Alarm-1 features a choice of a CD tracks or a beeping alarm sound, Alarm-2 features a radio alarm wake sound, and Alarm-3 features a nature wake sound. You can set any combination of the three alarms. In addition, each alarm features a 7-5-2 setting that lets you set the alarm in advance for a full week, the workweek, or the weekend.

### Setting Alarm-1 for CD Track or Beeping Alarm Sound

1. Press and hold the **15 Alarm-1 Button** until the Alarm-1 settings and **Wake Track Indicator** appear flashing on the display. The display will flash for ten seconds before returning to the standard clock display.
2. Press the **14 Reverse** or **19 Forward Button** to set the Alarm-1 time. Holding a button for a few seconds will advance or reverse the time rapidly. Be sure to set the correct AM/PM time, as shown by the **PM Indicator** on the display.
3. After setting the Alarm-1 time, insert a CD into the CD Player and use the **18 CD Track/Zone Button** to select the track that will play at the set time. To wake to a beeping alarm sound, leave the CD Player empty. Adjust the volume using the **4 Volume Buttons**.
4. After setting the wake time and sound, you will need to select your 7-5-2 setting. The 7-5-2 setting lets you set the alarm for a full week, weekdays only, or the weekend. Before setting the alarm, be sure that you have set the correct date, as shown in the *Setting the Calendar* section of this manual. While the display is still flashing, press the **9 Date Set/7-5-2 Button** until the desired setting is shown at the top of the display.
5. After you have programmed the Alarm-1 settings, press the **20 Enter Button** or wait ten seconds to return to the clock display. The **Alarm-1 Indicator** will appear on the display, showing that the alarm is set.

### Setting Alarm-2 for AM/FM Radio

1. Press and hold the **16 Alarm-2 Button** until the Alarm-2 settings and radio frequency appear flashing on the display.
2. Press the **14 Reverse** or **19 Forward Button** to set the Alarm-2 time.
3. Use the **12 Radio Band Button** and the **13 Memory Set 1-6 Button** to select a radio station to wake to. For more information on programming radio stations into memory, see the *Programming Radio Station Settings* section of this manual. Adjust the volume using the **4 Volume Buttons**.
4. See Note #4 in the previous section for instructions on setting the 7-5-2 alarm setting for Alarm-2.
5. After you have programmed the Alarm-2 settings, press the **20 Enter Button** or wait ten seconds to return to the clock display. The **Alarm-2 Indicator** will appear on the display, showing that the alarm is set.

## Sleeping to Nature Sounds with Timer

---

1. Press the **1 Sounds Button** twice to enter the sleep mode. This sets the sleep timer to the 90-minute setting. The sleep timer setting remains active for approximately ten seconds before returning to the standard display. The **Sleep Indicator** will be visible in the display.
2. Continue pressing the **1 Sounds Button** to select a 90-, 60-, 30-, or 15-minute sleep timer.
3. Press the **14 Reverse** or **19 Forward Button** to choose from the four nature sounds.
4. Press the **10 Sleep Volume Button** to find a comfortable sleep volume level. The **Sleep Volume Indicator** on the display shows the sleep volume level. Adjusting the sleep volume will not affect the alarm volume.
5. Press the **6 Off/Alarm Reset Button** to turn off the nature sounds before the sleep time has elapsed.

**Note:** To see the number of minutes remaining on the sleep timer, press the **1 Sound Button** once. The display will show the **Sleep Time** for approximately ten seconds before returning to the normal mode.

## Stereo Headphone Jack

---

Connect a pair of headphones (not included) to the **Headphones Jack** on the back of the unit for private listening. The built-in speakers will not operate while the headphones are connected.

### Important!

You must disconnect the headphones from the **Headphones Jack** before you go to sleep or you will not hear any sounds emit from the built-in speakers at the wake time.

## Adjusting the Display Backlight

---

- This alarm clock radio features an adjustable display backlight, with dim, medium, and bright settings. To select a backlight setting, press the **7 Snooze/Dimmer Bar** until the desired brightness is reached. **Please note that the backlight will not work while the clock is operating on battery power.**

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
The alarm does not sound	<ul style="list-style-type: none"> <li>The alarm was not set correctly for AM/PM</li> <li>Alarm icons are not on the display</li> <li>Date or 7-5-2 settings programmed incorrectly</li> </ul>	<ul style="list-style-type: none"> <li>Check the alarm time setting</li> <li>Press one of the Alarm Buttons so that its Indicator appears on the display</li> <li>Check and reprogram settings</li> </ul>
The alarm sounds at an incorrect time	<ul style="list-style-type: none"> <li>The wrong alarm icon was on the display</li> <li>The alarm was not set correctly for AM/PM</li> </ul>	<ul style="list-style-type: none"> <li>Make sure the alarm you wish to wake to is the only Alarm icon that appears on the display</li> </ul>
Buzzer alarm is heard when waking to CD	<ul style="list-style-type: none"> <li>A CD was not inserted into the CD player</li> <li>The CD was inserted incorrectly into the player</li> <li>The CD Player door is not closed</li> <li>There was a power failure</li> </ul>	<ul style="list-style-type: none"> <li>When waking to CD, always make sure a CD has been inserted</li> <li>Always insert the CD with the label surface facing out</li> <li>Push the door gently until it is completely closed</li> <li>All alarms default to buzzer during a power failure as long as working batteries are inserted correctly inside the battery compartment</li> </ul>
There is no display and the CD/radio will not play	<ul style="list-style-type: none"> <li>The unit is disconnected from an AC outlet</li> <li>The AC outlet has no power</li> <li>The AC outlet is controlled by a wall switch that is off</li> </ul>	<ul style="list-style-type: none"> <li>Connect to an AC outlet</li> <li>Try the unit on another outlet</li> <li>Do not use an outlet that is controlled by a wall switch</li> </ul>
CD skips while playing	<ul style="list-style-type: none"> <li>Dirty or defective disc</li> <li>Dirty lens</li> </ul>	<ul style="list-style-type: none"> <li>Check the bottom of the disc and clean if necessary with a soft cleaning cloth, always wipe from the center out</li> <li>Clean with a commercial lens cleaner</li> </ul>

If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.

## Operating the Alarms (Continued)

### Setting Alarm-3 for Nature Sounds

- Press and hold the **17 Alarm-3 Button** until the Alarm-3 settings and **Nature Sounds Indicator** appear on the display.
- Press the **14 Reverse** or **19 Forward Button** to set the Alarm-3 time.
- Use the **1 Sound Button** to select a nature sound to wake to. There is a choice of four sounds:  
**Sound #1: Ocean Surf**  
**Sound #2: Rushing Brook**  
**Sound #3: Forest Spring**  
**Sound #4: Wind Chimes**
- See Note #4 in the *Setting Alarm-1* section for instructions on setting the 7-5-2 alarm setting for Alarm-3.
- After you have programmed the Alarm-3 settings, press the **20 Enter Button** or wait ten seconds to return to the clock display. The **Alarm-3 Indicator** will appear on the display, showing that the alarm is set.

### Checking Your Alarm Settings

To check any of your alarm settings after you've set the alarm, press any Alarm Button twice so that the settings appear on the display. The display will return to the standard clock display after a few seconds. After you have checked the settings, be sure that the Alarm Indicator still appears on the display so that the alarm will sound at the set time.

### Turning Off the Alarms

- After the alarm sounds, press the **6 Alarm Off/Reset Button** to turn off the alarm while still maintaining the programmed 7-5-2 alarm settings. To turn off an alarm and cancel its 7-5-2 settings, press its Alarm Button so that its Alarm Indicator no longer appears on the display.
- If it is not turned off, the alarm will sound for an hour before stopping. As long as an **Alarm Indicator** appears on the display, the alarm will sound at the set time, according to the 7-5-2 settings.
- To activate the snooze feature, press the **7 Snooze/Dimmer Bar** when the alarm sounds. The alarm will shut off for approximately ten minutes before sounding again. The feature can be repeated several times during the one-hour snooze cycle.

## Sleeping to Compact Discs

**Note:** For more information about playing CD's, see the *Listening to Compact Discs* section of this manual.

1. Press the **3 CD Play/Pause Button** to begin playing the CD. Without any interference, the disc will play all the way through until the end, then automatically shut off.
2. You can adjust the volume to a comfortable level using the **4 Volume Buttons**.

**Note:** If you use the **4 Volume Buttons** to adjust the CD sleep volume, this will affect the alarm volume level.

3. To turn the CD off before it has finished playing, press the **6 Alarm Off/Reset Button**.

## Sleeping to the Radio with Timer

**Note:** For more information about playing the radio, see the *Listening to the Radio* section of this manual.

1. Press the **2 Radio Button** twice to enter the sleep mode. This sets the radio sleep timer to the 90-minute setting. The sleep timer setting remains active for approximately ten seconds before returning to the standard display. The **Sleep Indicator** will be visible in the LCD display.
2. Continue pressing the **2 Radio Button** to select a 90-, 60-, 30-, or 15-minute sleep timer.
3. Use the instructions in the *Listening to the Radio* section to select a radio station.
4. Press the **10 Sleep Volume Button** to find a comfortable sleep volume level. The **Sleep Volume Indicator** on the display shows the sleep volume level. Adjusting the radio sleep volume will not affect the alarm volume.
5. Press the **6 Off/Alarm Reset Button** to turn off the radio before the sleep time has elapsed.

**Note:** To see the number of minutes remaining on the sleep timer, press the **2 Radio Button** once. The display will show the sleep time for approximately ten seconds before returning to the normal mode.

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Poor FM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Try adjusting the direction of the FM wire antenna</li> </ul>
Poor AM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Rotate the unit to try and gain better reception</li> </ul>
Unit is on but there is low volume or no volume at all	<ul style="list-style-type: none"> <li>• Main volume has been turned all the way down</li> <li>• Headphones are connected to Headphone Jack</li> </ul>	<ul style="list-style-type: none"> <li>• Raise the volume with the volume dial</li> <li>• Disconnect the headphones</li> </ul>
Unit shuts off unexpectedly	<ul style="list-style-type: none"> <li>• Unit was in the Sleep Mode instead of Power On Mode</li> <li>• The unit was turned On by the alarm and the alarm time ended</li> </ul>	<ul style="list-style-type: none"> <li>• Press the Radio On Button once to turn the unit back on</li> </ul>
Cannot set the clock or alarm time	<ul style="list-style-type: none"> <li>• The display must be flashing in order to set the clock/alarm times</li> </ul>	<ul style="list-style-type: none"> <li>• Hold the Time Set Button or one of the Alarm Set Buttons until the display flashes</li> </ul>
The clock and/or calendar has been adjusted to an incorrect time/date.	<ul style="list-style-type: none"> <li>• The clock is an Auto-Set model, meaning that it adjusts automatically for leap years and daylight-saving time periods.</li> </ul>	<ul style="list-style-type: none"> <li>• Follow the instructions to manually set the clock and/or calendar.</li> </ul>
The display backlight is not lit.	<ul style="list-style-type: none"> <li>• The display backlight will not operate when the clock is running on battery power.</li> </ul>	<ul style="list-style-type: none"> <li>• Operate the clock using the power cord.</li> </ul>

If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.