 


TIMEX®

Model T116

Jelly Clock

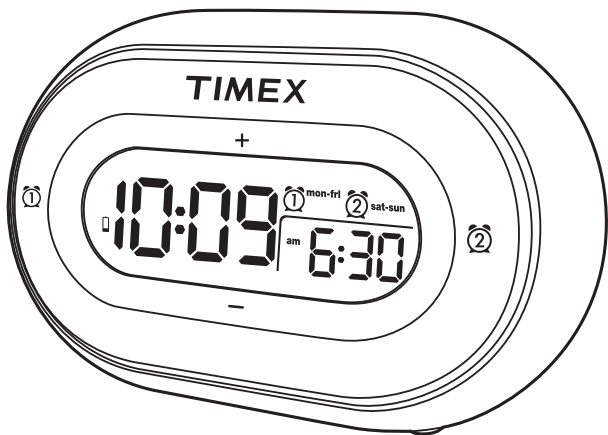

For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.



CAUTION

**RISK OF ELECTRIC SHOCK.
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this (polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

Getting Started

Installing Backup Batteries

 
Note: After installing the backup batteries and reading the Maintenance section, plug the AC line cord correctly into a wall outlet.

Battery Backup

If the backup batteries have been installed and a power failure occurs or the AC cord is accidentally disconnected, the current time and alarm time settings will be temporarily maintained.

If the backup batteries have not been installed or are dead, when the AC power resumes the display will show 12:00 and you must reset the time and alarm settings.

1. Open the battery compartment cover located on the bottom of the unit.
2. Install 2 “AAA” size batteries into the compartment, making sure that the + and – polarities match the diagram next to the compartment.
3. Close the battery cover.

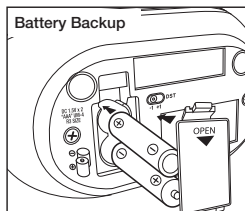

For the Best Possible Performance

 
 
We recommend the use of alkaline batteries for longer life.

- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item is not going to be needed for an extended period of time (approximately 30 days or more) to prevent leakage or damage to the unit.


Maintenance

- Protect your furniture when placing the clock on natural wood or a lacquered wood finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents may damage the surface of the case.
- If the clock is not to be used for a prolonged period, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean it thoroughly and replace the batteries.

Controls and Indicators

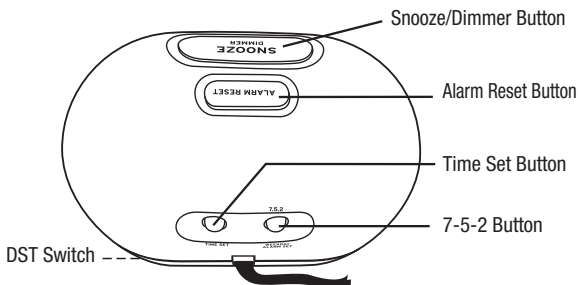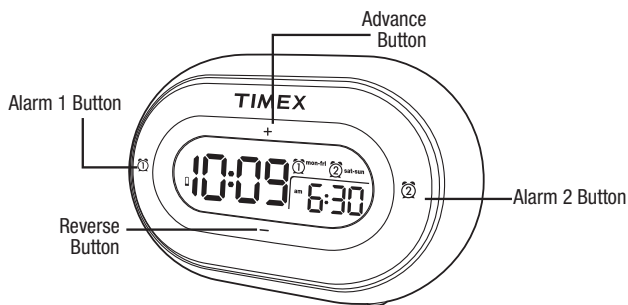

LCD Display

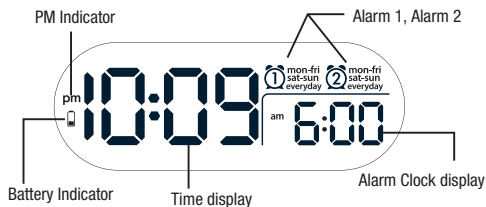 

Setting Clock Time and Calendar

Setting Clock Time

Press and hold the **Time Set Button** until the display flashes. (If no buttons are pressed within approx. ten seconds, the display will stop flashing and return to normal mode.)

When display is flashing, press the **+ Button** and **- Button** to adjust to the correct time. Press and hold the buttons to advance/reverse rapidly. A **PM Indicator** will appear to the left of the current time; there is no AM indicator.

Press the **Time Set Button** when the correct time is displayed. 2 beeps will confirm the clock setting is completed.

Setting Calendar

Once the time is set in clock setting mode, the year will flash on the display. If needed, press the **+ Button** and **- Button** to adjust the year. Press the **Time Set Button** when the correct year is showing. Two beeps will confirm the year is set. The date will flash on the display.

If needed, press the **+ Button** and **- Button** to adjust the date. Press the **Time Set Button** when the correct date is showing. Two beeps will confirm the date is set.

Note: This unit comes with a **Daylight Saving Time (DST) Switch** (located on the bottom of the unit) to make adjusting for Daylight Saving Time simple. Just move the **DST Switch** to +1 to add an hour or to -1 to subtract an hour from current time.

Setting Alarm Time

Press and hold the **Alarm-1** or **Alarm-2 Button** until the alarm time display (located at the lower right part of display) flashes. If no buttons are pressed within approx. ten seconds, the display will stop flashing and return to normal mode.

Press the **+ Button** and **- Button** to adjust the alarm time. Press and hold the buttons to advance/reverse rapidly. A **PM** and **AM Indicator** appears to the left of the alarm time display.

When the desired alarm time is set, press the **7-5-2 Button** to select the desired alarm frequency: 7 to wake you everyday, 5 to wake you on weekdays or 2 to wake you only on the weekend. Using the dual alarms, you can easily set the alarm clock to wake you at different times during the week and on the weekend.

When the alarm time has been set, press the alarm button again to return to normal mode. 2 beeps tone will indicate Alarm Setting is complete.

Wake to Alarm

After setting the alarm time(s), you can press the **Alarm 1** or **Alarm 2 button** to arm or disarm the associated alarm. The **Alarm Indicator Icon(s)** will appear on the display, showing that the alarm is armed and will sound at the displayed time.

After the alarm sounds, press the **Alarm Reset Button** to turn it off and automatically reset it for the same time the following day.

To turn off the alarm without setting it for the following day, just press the armed alarm button again. The **Alarm Indicator Icon** will disappear.

NOTE: The alarm will sound for approximately 1 hour and then turn off automatically. This cycle will repeat every 24 hours unless the controls are changed.

Snooze Operation

During normal operation, press the **Snooze button** once to adjust the LCD backlight brightness to Hi, Med, Lo or Off.

To program the snooze time, just press and hold the **Snooze/Dimmer Button** until the display shows the current snooze time (default is 9 minutes). Press the **+ Button** and **- Button** to adjust snooze time from 1 to 30 minutes. Press the **Snooze/Dimmer Button** again. Two beeps will confirm the snooze time is set.

Press the **Snooze/Dimmer Button** when the alarm sounds to shut off the alarm for the programmed amount of snooze time before sounding again. You may repeat this several times during the one-hour alarm cycle.

Battery Low indicator

The **Battery Low Indicator** is located on the lower left corner of the display and will flash if backup batteries are low and need to be replaced with fresh batteries.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and printed on the product.

- Water and Moisture** — The unit should be kept dry and away from water or other liquids. If liquid is spilled on the unit, or if the unit should fall or be accidentally placed in or on a wet or damp area, immediately unplug the unit.
- Ventilation** — The unit should be set up in an area and position that does not interfere with its proper ventilation. Check to see where the ventilation opening is on the product. Do not set up the unit on a bed, sofa, rug, or similar surface that may block the opening. Do not keep the unit in a tight-fitting installation, such as a bookcase or cabinet, which impedes the flow of air through the ventilation openings.
- Heat** — The unit should be situated away from heat sources such as radiators, space heaters, stoves, or other appliances (including amplifiers) that produce or emit heat.
- Power Sources** — The unit should be connected to a power supply only of the type described in the operating instructions, or as marked on the appliance.
- Grounding or Polarization** — This unit is equipped with a two-pronged, polarized alternating-current line plug (a plug having one blade wider than the other). This plug only fits into your power outlet in one direction. This is a safety feature. If you are having difficulty inserting the plug fully into your outlet, try reversing the plug blades; do not force the plug into the outlet. If you are still having difficulty, contact your electrician to replace your obsolete outlet.
- Power-Supply Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to areas at the outlet and where they exit from the unit.
- Overloading** — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Cleaning** — The unit should be cleaned only as recommended by the manufacturer. See the Maintenance section of this manual for cleaning instructions.
- Periods of Nonuse** — If the unit is to be left unused for an extensive period of time, such as longer than a month, the power cord should be unplugged from the outlet.
- Object and Liquid Entry** — Care should be taken so that objects do not fall and/or liquids do not spill into any openings or vents located on the product.
- Damage Requiring Service** — The appliance should be serviced by qualified service personnel when:
 - the power-supply cord or plug has been damaged.
 - objects have fallen and/or liquid has been spilled into openings or vents.
 - the unit has been exposed to rain.
 - the unit has been dropped or the enclosure damaged.
 - the unit exhibits a marked change in performance or does not operate normally.
- Servicing** — The user should not attempt to service the unit beyond those methods described in the operating instructions. Any servicing not covered in the instructions should be left to qualified service personnel. Please also see the Warranty Information for more information on product servicing.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

**Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1401 Pullman Drive, Suite A
El Paso, TX 79936-7726**

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the United States and other countries.