


TIMEX®



**Model T315
Travel Alarm Clock Radio**

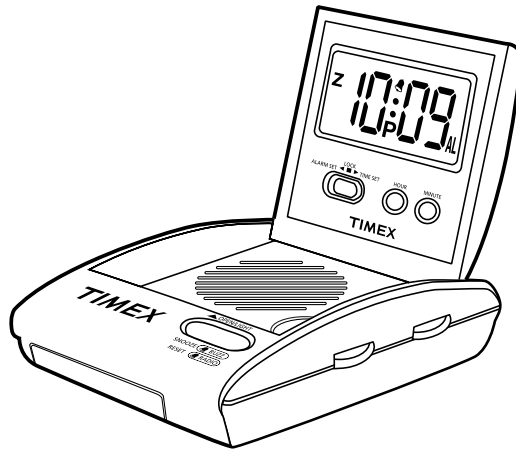

For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.
Para asistencia en Español, llame al 1-800-888-4491.

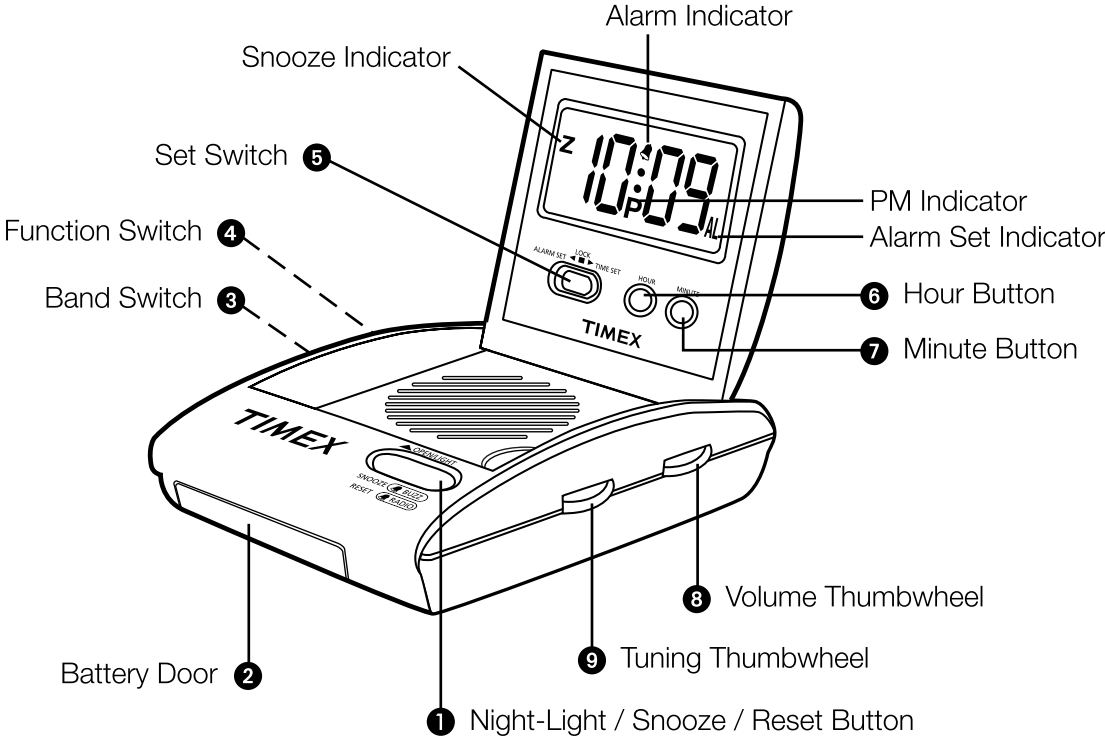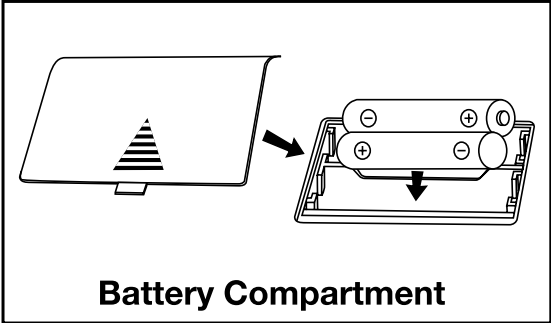

Important Radio FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Installing the Batteries

This unit operates on 2 “AAA” batteries.

1. Turn the unit over and slide open the battery compartment door (see diagram on reverse).
2. Install 2 “AAA” batteries in the battery compartment, making sure that the + and - polarities match with the diagram inside the compartment.
3. Slide the compartment door back into place.

For the Best Possible Performance:

- We recommend using alkaline batteries.
- Do not recharge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the clock before being charged (if removable).
- Rechargeable batteries are only to be recharged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Remove exhausted batteries from the clock.
- Supply terminals are not to be short-circuited.

Maintenance Guide

- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents may damage the surface of the case.
- Do not keep the unit near damp, hot, or cold areas.
- If the clock is not to be used for a prolonged period, remove the battery to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean it thoroughly and replace the battery.
- Protect your furniture when placing the unit on natural wood or wood with a lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.

Setting Clock and Alarm Times

Setting Clock Time

1. Slide the **5 Set Switch** to the **Time Set** position.
2. Press the **6 Hour** and **7 Minute Buttons** to set the clock. Remember to set the correct AM or PM time. A small “P” in the display is the **PM Indicator**.
3. Slide the **5 Set Switch** back to the **Lock** position.

Setting Alarm Time

1. Slide the **5 Set Switch** to the **Alarm Set** position. The letters “AL” and the alarm time will appear on the display.
2. Press the **6 Hour** and **7 Minute Buttons** to set the alarm time. Again, remember to set the correct AM or PM time.
3. Slide the **5 Set Switch** back to the **Lock** position.

Operating the Radio

Notes: Extend the FM rod antenna fully for best FM reception. Rotate the unit, as required, for best AM reception.

1. To turn on the radio, slide the **4 Function Switch** to the **On** position. Be sure to open the cabinet and extend the antenna for the best reception.
2. Slide the **3 Band Switch** to the **AM** or **FM** position.
3. Turn the **9 Tuning Thumbwheel** to select a station.
4. Turn the **8 Volume Thumbwheel** to set the volume.
5. Slide the **4 Function Switch** to the **Off** position to turn the radio off. Close the antenna.

Operating the Alarm

1. Set the alarm time as indicated in *Setting Clock and Alarm Times*.
 2. This clock features a buzzer alarm and a radio alarm. To wake to the radio, slide the **4 Function Switch** to the **Radio Alarm** position. The display will show the **Alarm “Bell” Indicator**. To select an alarm station and volume, see *Operating the Radio*. To wake to the buzzer, slide the **4 Function Switch** to the **Buzzer Alarm** position. The display will show the **Alarm “Bell”** and **Snooze “Z” Indicators**.
- Note:** The buzzer alarm features a snooze function, while the radio alarm features an alarm reset function.
3. After the buzzer alarm sounds, press the **1 Snooze/Reset Button** to snooze for four minutes. The **Snooze “Z” Indicator** flashes during this period. The snooze function can be activated as many times as desired. To shut the alarm completely, slide the **4 Function Switch** to the **Off** position.
 4. After the radio alarm sounds, press the **1 Snooze/Reset Button** to turn off the alarm and reset it for the same time the following day. **There is no radio snooze alarm.** To shut the alarm without resetting it, slide the **4 Function Switch** to the **Off** position.

Operating the Night-Light

To operate the night-light, press and hold the **1 Night-Light Button**.

Limited 90-Day Warranty

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1330 Goodyear Dr.
El Paso, TX 79936-6420

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes or compact discs (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the United States and other countries.

© 2006 SDI Technologies, Inc. All rights reserved

Para asistencia en Espanol, llame al 1-800-888-4491